

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	2. Starter 3. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	DI-265 DI-269 IN-28
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-269
Engine cranks normally (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-262 DI-269 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-262 DI-269
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-262 DI-269
High engine idle speed (Poor idling)	1. ECM power source circuit	DI-265
Low engine idle speed (Poor idling)	1. Fuel pump control circuit	DI-269
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-269
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-265 DI-269
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-269 DI-295
Surging (Poor driveability)	1. Fuel pump control circuit	DI-269
Soon after starting (Engine stall)	1. Fuel pump control circuit	DI-269
During A/C operation (Engine stall)	1. ECM	IN-28