
VEHICLE LIFT AND SUPPORT LOCATIONS


IN0DA-01

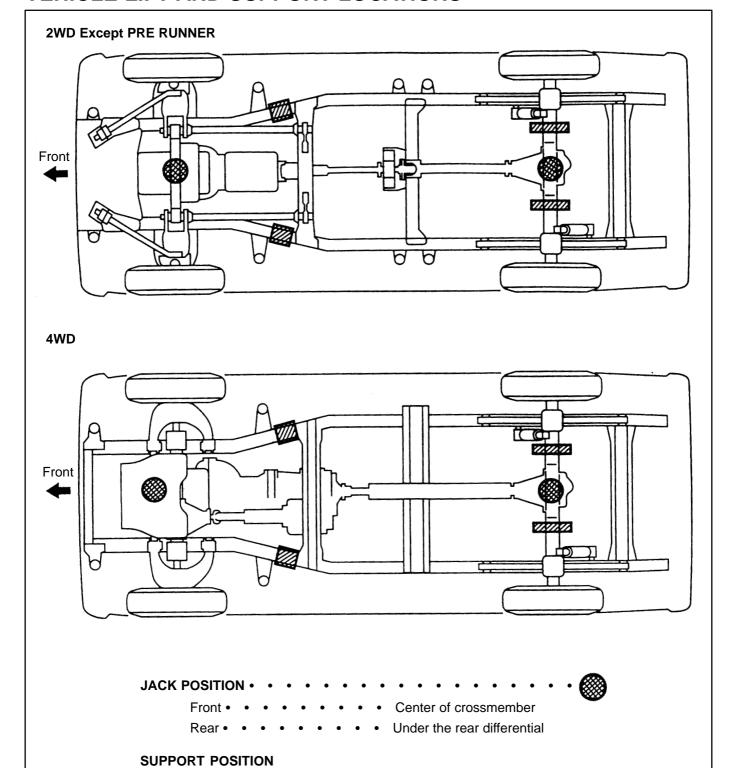

B00699

Safety stand •

PRE RUNNER

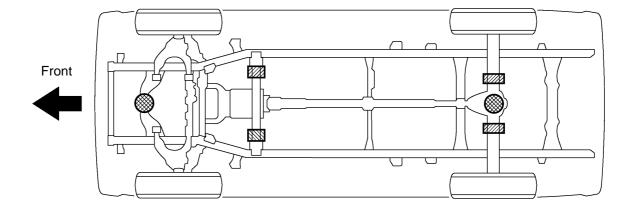

JACK POSITION

Front Center of crossmember

Rear Under the rear differential

SUPPORT POSITION

Safety stand

B04189