
 
 


 
 
 



 



 



 

MANUAL TRANSMISSION (W59)

SST (Special Service Tools)

PP09R-02

	09308-00010 Oil Seal Puller	Output shaft rear bearing outer race
	(09308-10010) Oil Seal Puller	Extension housing oil seal
	09312-2001 1 Transmission Gear Remover & Replacer	5th gear Output shaft rear bearing Reverse gear
	(09313-00010) Reverse Gear Remover	
	(09313-00030) Rear Bearing Replacer	
	(09313-00040) Plate "A"	
	(09313-00050) Plate "B"	
	09316-6001 1 Transmission & Transfer Bearing Replacer	No.3 clutch hub Counter gear center bearing outer race
	(09316-0001 1) Replacer Pipe	
	(09316-00071) Replacer "F"	
	09506-35010 Differential Drive Pinion Rear Bearing Replacer	Input shaft bearing Output shaft center bearing
	09950-00020 Bearing Remover	

PREPARATION - MANUAL TRANSMISSION (W59)

	09950-4001 1 Puller B Set	Counter 5th gear No.3 clutch hub Reverse gear Counter gear side race
	09950-60010 Replacer Set	
	(09951-00440) Replacer 44	Front bearing retainer oil seal
	(09951-00510) Replacer 51	Counter gear center bearing outer race
	(09951-00560) Replacer 56	Output shaft rear bearing outer race Extension housing oil seal Transfer adaptor oil seal
	09950-70010 Handle Set	
	(09951-07150) Handle 150	