
 
 
 

 
 
 
 
 
 
 
 
 
 

 
 
 

 
 
 
 
 


**STEERING****SST (Special Service Tools)**

 
 

 
 








PP3HD-01

	09023-12700	Union Nut Wrench 17mm	PS gear (2WD, 4WD and Pre runner)
	09023-38200	Union Nut Wrench 12mm	PS gear (2WD, 4WD and Pre runner)
	09521-24010	Drive Shaft Boot Clamping Tool	PS gear (2WD)
	09527-2001 1	Rear Axle Shaft Bearing Remover	PS gear (2WD)
	09608-04031	Front Hub Inner Bearing Cone Replacer	PS vane pump (2RZ-FE, 3RZ-FE)
	09612-00012	Rack & Pinion Steering Rack Housing Stand	PS gear (2WD, 4WD and Pre runner)
	09612-2201 1	Tilt Handle Bearing Replacer	PS gear (2WD)
	09612-24014	Steering Gear Housing Overhaul Tool Set	
	(09613-2201 1)	Steering Rack Shaft Bushing Puller	PS gear (2WD)
	09616-0001 1	Steering Worm Bearing Adjusting Socket	PS gear (2WD, 4WD and Pre runner)
	09631-00350	Steering Rack Cover 35	PS gear (4WD and Pre runner)
	09631-10021	Rack Stopper Wrench	PS gear (2WD)





 
 




 
 

## PREPARATION - STEERING

	09631-10030	Oil Seal Remover	PS vane pump (2RZ-FE, 3RZ-FE)
	09631-12071	Steering Rack Oil Seal Test Tool	PS gear (2WD, 4WD and Pre runner)
	09631-20060	Bearing Guide Nut Wrench	PS gear (4WD and Pre runner)
	09631-20081	Seal Ring Tool	PS gear (2WD, 4WD and Pre runner)
	09631-20102	Steering Rack Cover "H"	PS gear (2WD)
	09640-10010	Power Steering Pressure Gauge Set	
	(09641-01010)	Gauge Assy	Power steering fluid
	(09641-01030)	Attachment B	Power steering fluid
	(09641-01060)	Attachment E	Power steering fluid
	09922-10010	Variable Open Wrench	PS gear (2WD, 4WD and Pre runner)
	09950-4001 1	Puller B Set	
	(09958-0401 1)	Holder	Tilt steering column
	09950-50012	Puller C Set	

PREPARATION - STEERING

	(09951-05010) Hanger 150	Non-tilt steering column Tilt steering column
	(09952-05010) Slide Arm	Non-tilt steering column Tilt steering column
	(09953-05010) Center Bolt 100	Non-tilt steering column Tilt steering column
	(09954-05020) Claw No.2	Non-tilt steering column Tilt steering column
	09950-60010 Replacer Set	
	(09951-00180) Replacer 18	PS gear (2WD, 4WD and Pre runner)
	(09951-00240) Replacer 24	PS gear (2WD)
	(09951-00250) Replacer 25	PS gear (2WD)
	(09951-00260) Replacer 26	PS gear (2WD, 4WD and Pre runner)
	(09951-00280) Replacer 28	PS gear (2WD, 4WD and Pre runner)
	(09951-00310) Replacer 31	PS gear (2WD)
	(09951-00320) Replacer 32	PS gear (2WD, 4WD and Pre runner)
	(09951-00330) Replacer 33	PS vane pump (5VZ-FE) PS gear (2WD, 4WD and Pre runner)

PREPARATION - STEERING

	(09951-00360) Replacer 36	PS gear (4WD and Pre runner)
	(09951-00400) Replacer 40	PS gear (2WD)
	(09951-00420) Replacer 42	PS gear (2WD)
	(09951-00490) Replacer 49	PS gear (4WD and Pre runner)
	(09952-06010) Adapter	PS gear (2WD, 4WD and Pre runner)
	09950-70010 Handle Set	
	(09951-07100) Handle 100	PS vane pump (5VZ-FE) PS gear (4WD and Pre runner)
	(09951-07150) Handle 150	PS gear (2WD, 4WD and Pre runner)
	(09951-07200) Handle 200	PS gear (2WD)
	(09951-07360) Handle 360	PS gear (2WD, 4WD and Pre runner)
	09960-10010 Variable Pin Wrench Set	
	(09962-01000) Variable Pin Wrench Arm Assy	PS vane pump (2RZ-FE, 3RZ-FE, 5VZ-FE)
	(09963-01000) Pin 10	PS vane pump (2RZ-FE, 3RZ-FE, 5VZ-FE)