


# CHARGING

\* 1 : W/ DAYTIME RUNNING LIGHT  
 \* 2 : W/O DAYTIME RUNNING LIGHT

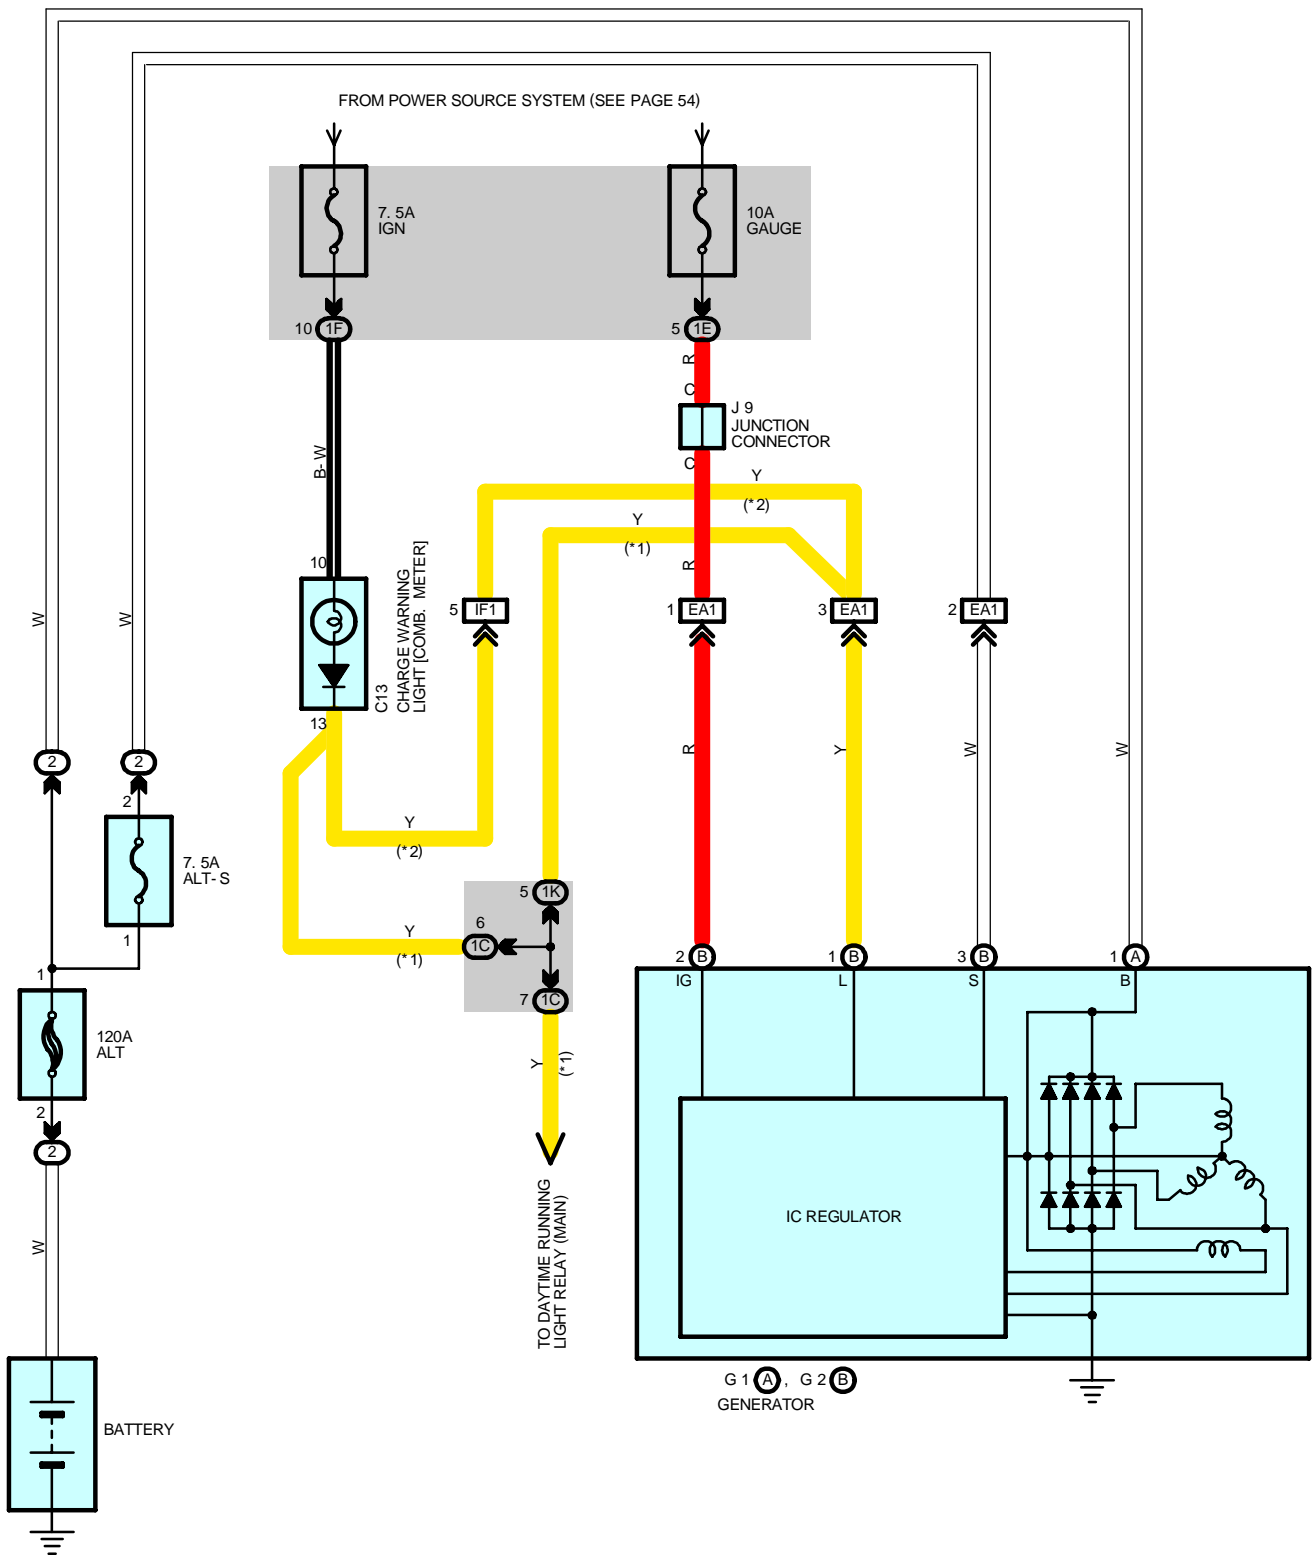

**SERVICE HINTS****G2 (B) GENERATOR**

- (B) 3-GROUND : **13.9- 15.1** volts with engine running at **2000** rpm and **25° C (77° F)**  
**13.5- 14.3** volts with engine running at **2000** rpm and **115° C (239° F)**  
 (B) 1-GROUND : **0- 4** volts with ignition SW at **ON** position and engine not running

**○ : PARTS LOCATION**

Code		See Page	Code		See Page	Code	See Page
C13		34	G2	B	30 (5VZ-FE)	J9	33 (3RZ-FE, 2RZ-FE)
G1	A	30 (5VZ-FE)			32 (3RZ-FE, 2RZ-FE)		
		32 (3RZ-FE, 2RZ-FE)	J9	31 (5VZ-FE)			

**○ : RELAY BLOCKS**

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

**○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1E	23	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
1F	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1K	23	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)

**□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40 (5VZ-FE)	Engine Room Main Wire and Engine No.2 Wire (Near the Battery)
	42 (3RZ-FE,2RZ-FE)	
IF1	44	Engine Room Main Wire and Cowl Wire (Left Kick Panel)