


INTERIOR LIGHT

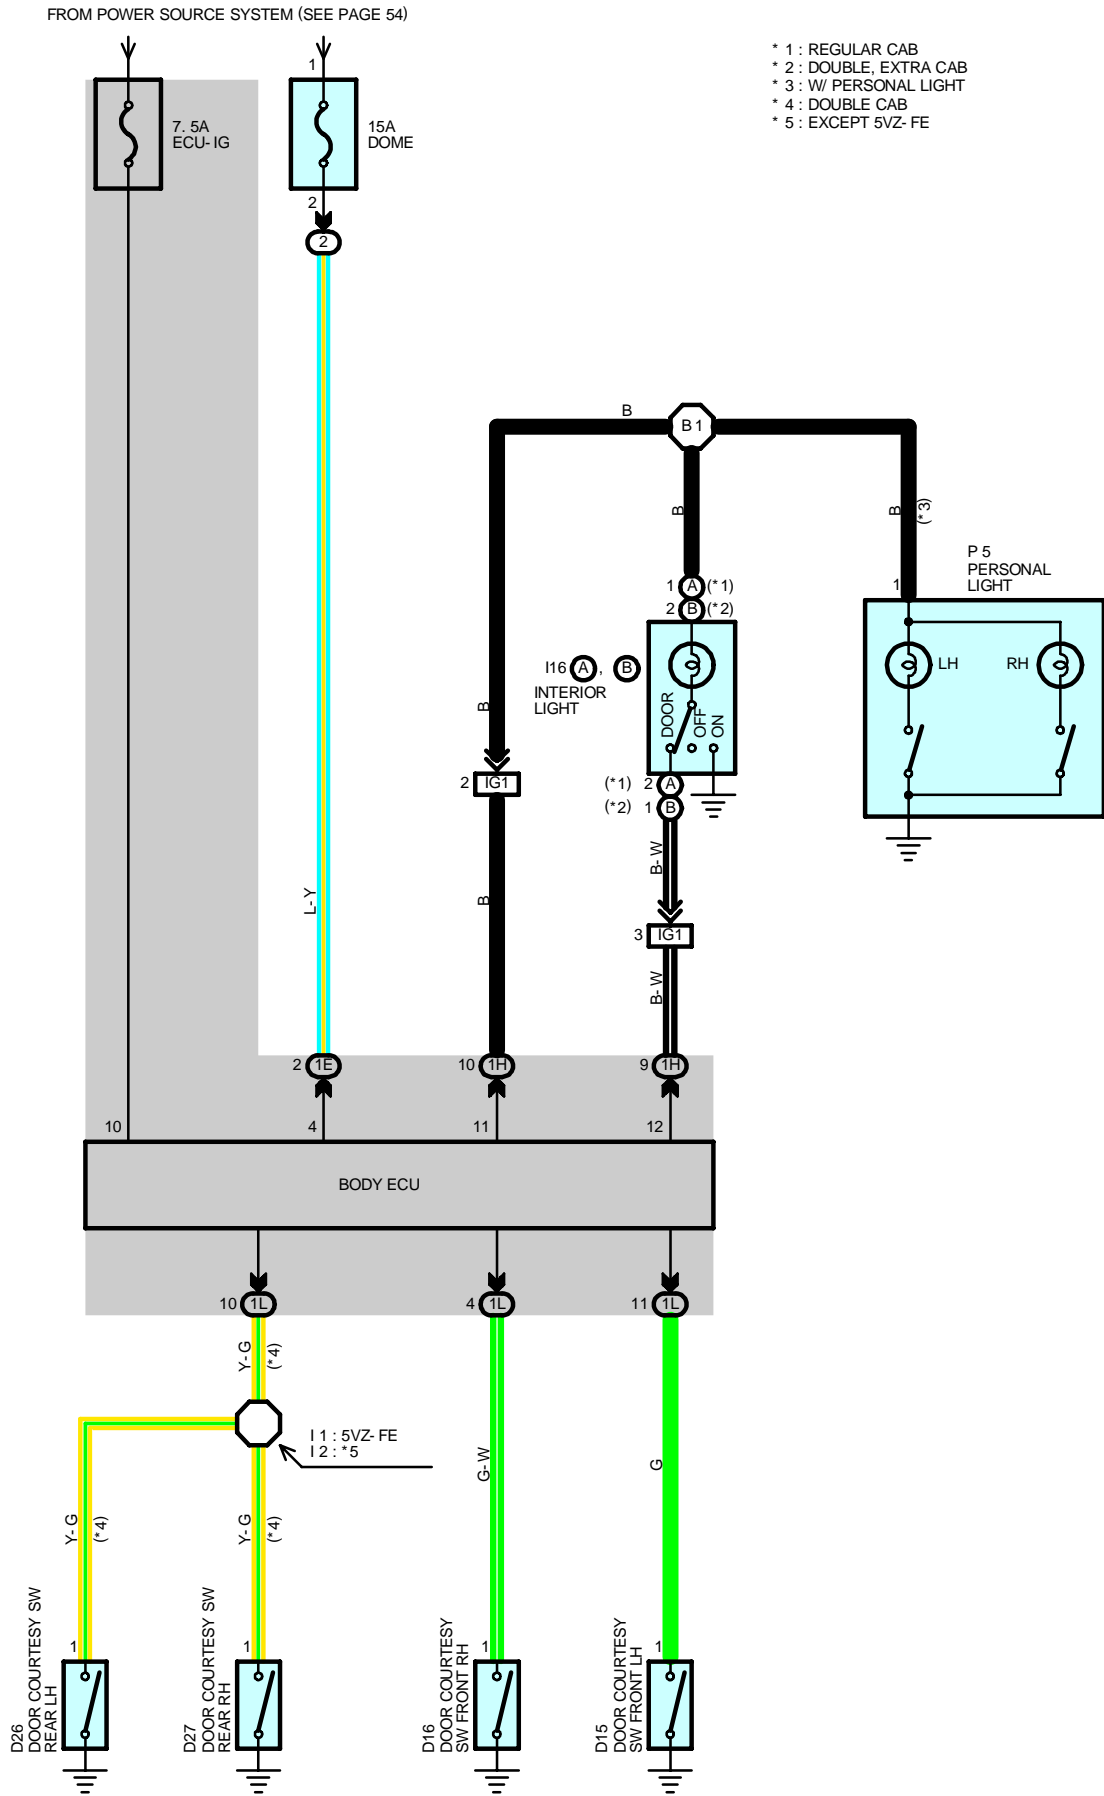

SERVICE HINTS**D15, D16, D26, D27 DOOR COURTESY SW FRONT REAR LH, RH**

1-GROUND : Closed with door open

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D15	34	D27	36 (Double Cab)	I16	B 37 (Except Double Cab)
D16	34	I16	A 37 (Except Double Cab)	P5	36 (Double Cab)
D26	36 (Double Cab)		B 36 (Double Cab)		37 (Except Double Cab)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	23	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
1H	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1L	22	

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	44	Cowl Wire and Roof Wire (Left Kick Panel)

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	44	Cowl Wire	B1	46 (Double Cab)	Roof Wire
I2				48 (Except Double Cab)	