

SERVICE HINTS**S5 STOP LIGHT SW**

2-1 : Closed with brake pedal depressed

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
H8	36 (Double Cab)	R6	37 (Except Double Cab)	S5	35
	37 (Except Double Cab)	R7	36 (Double Cab)		
R6	36 (Double Cab)		37 (Except Double Cab)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Roof Wire and J/B No.1 (Lower Finish Panel)
1F	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1J		
3F	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	44	Cowl Wire and Roof Wire (Left Kick Panel)
BN1	46 (Double Cab)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	48 (Except Double Cab)	

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	44	Around the Right Edge of the Reinforcement
IG	44	Around the Left Edge of the Reinforcement