


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

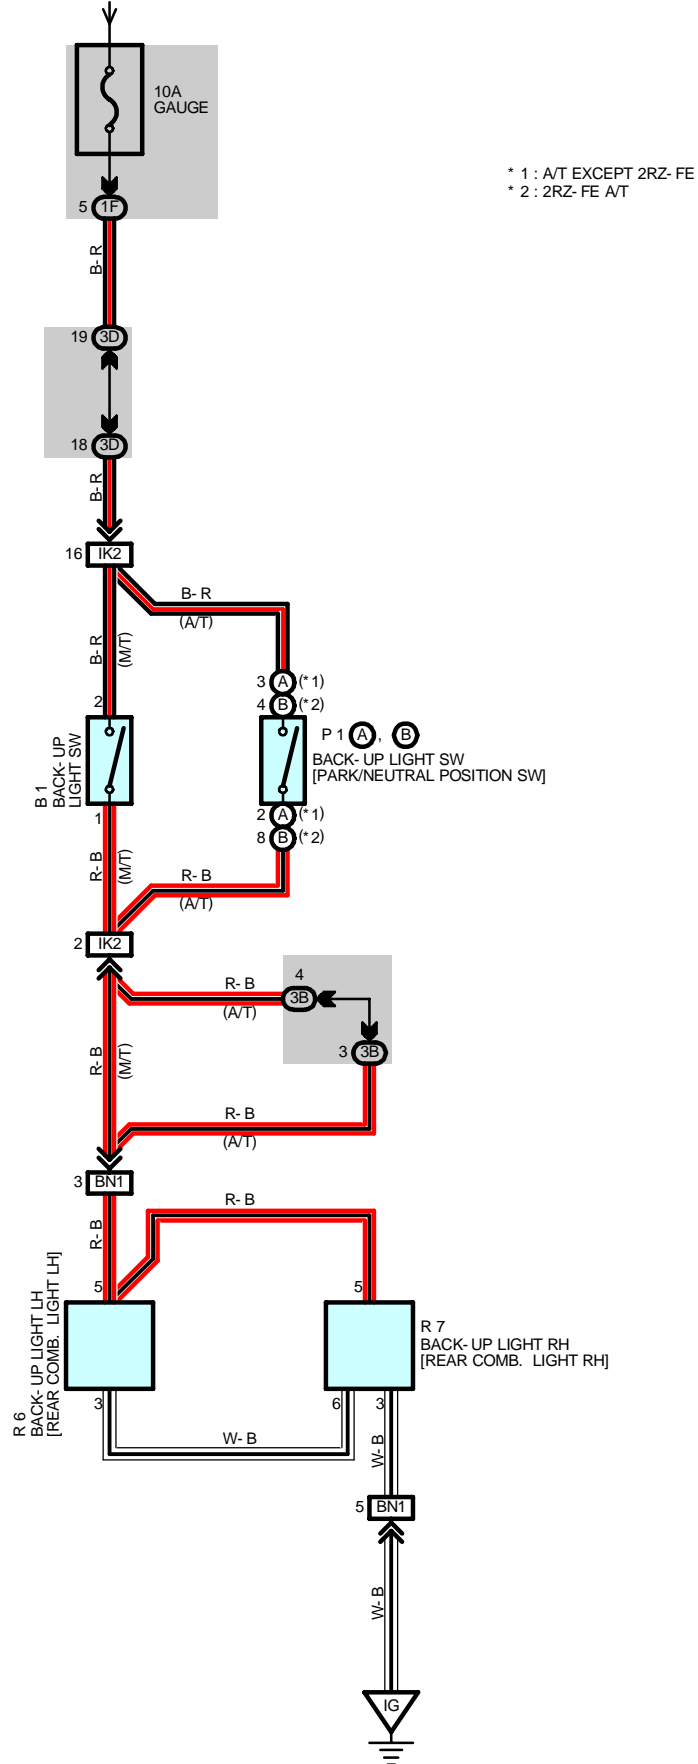

SERVICE HINTS

P1 (A), (B) BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW] (A/T)

(A) 3-(A) 2, (B) 4-(B) 8 : Closed with shift lever in **R** position

B1 BACK-UP LIGHT SW (M/T)

2-1 : Closed with shift lever in **R** position

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
B1	30 (5VZ-FE)	P1	A	33 (3RZ-FE)	R6	37 (Except Double Cab)
	32 (3RZ-FE, 2RZ-FE)		B	33 (2RZ-FE)	R7	36 (Double Cab)
P1	A	31 (5VZ-FE)	R6	36 (Double Cab)		37 (Except Double Cab)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
3B	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3D		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK2	44	Engine Wire and Cowl Wire (Above the Glove Box)
BN1	46 (Double Cab)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	48 (Except Double Cab)	

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	44	Around the Left Edge of the Reinforcement