



4WD (w/o 2-4 SELECT SW)

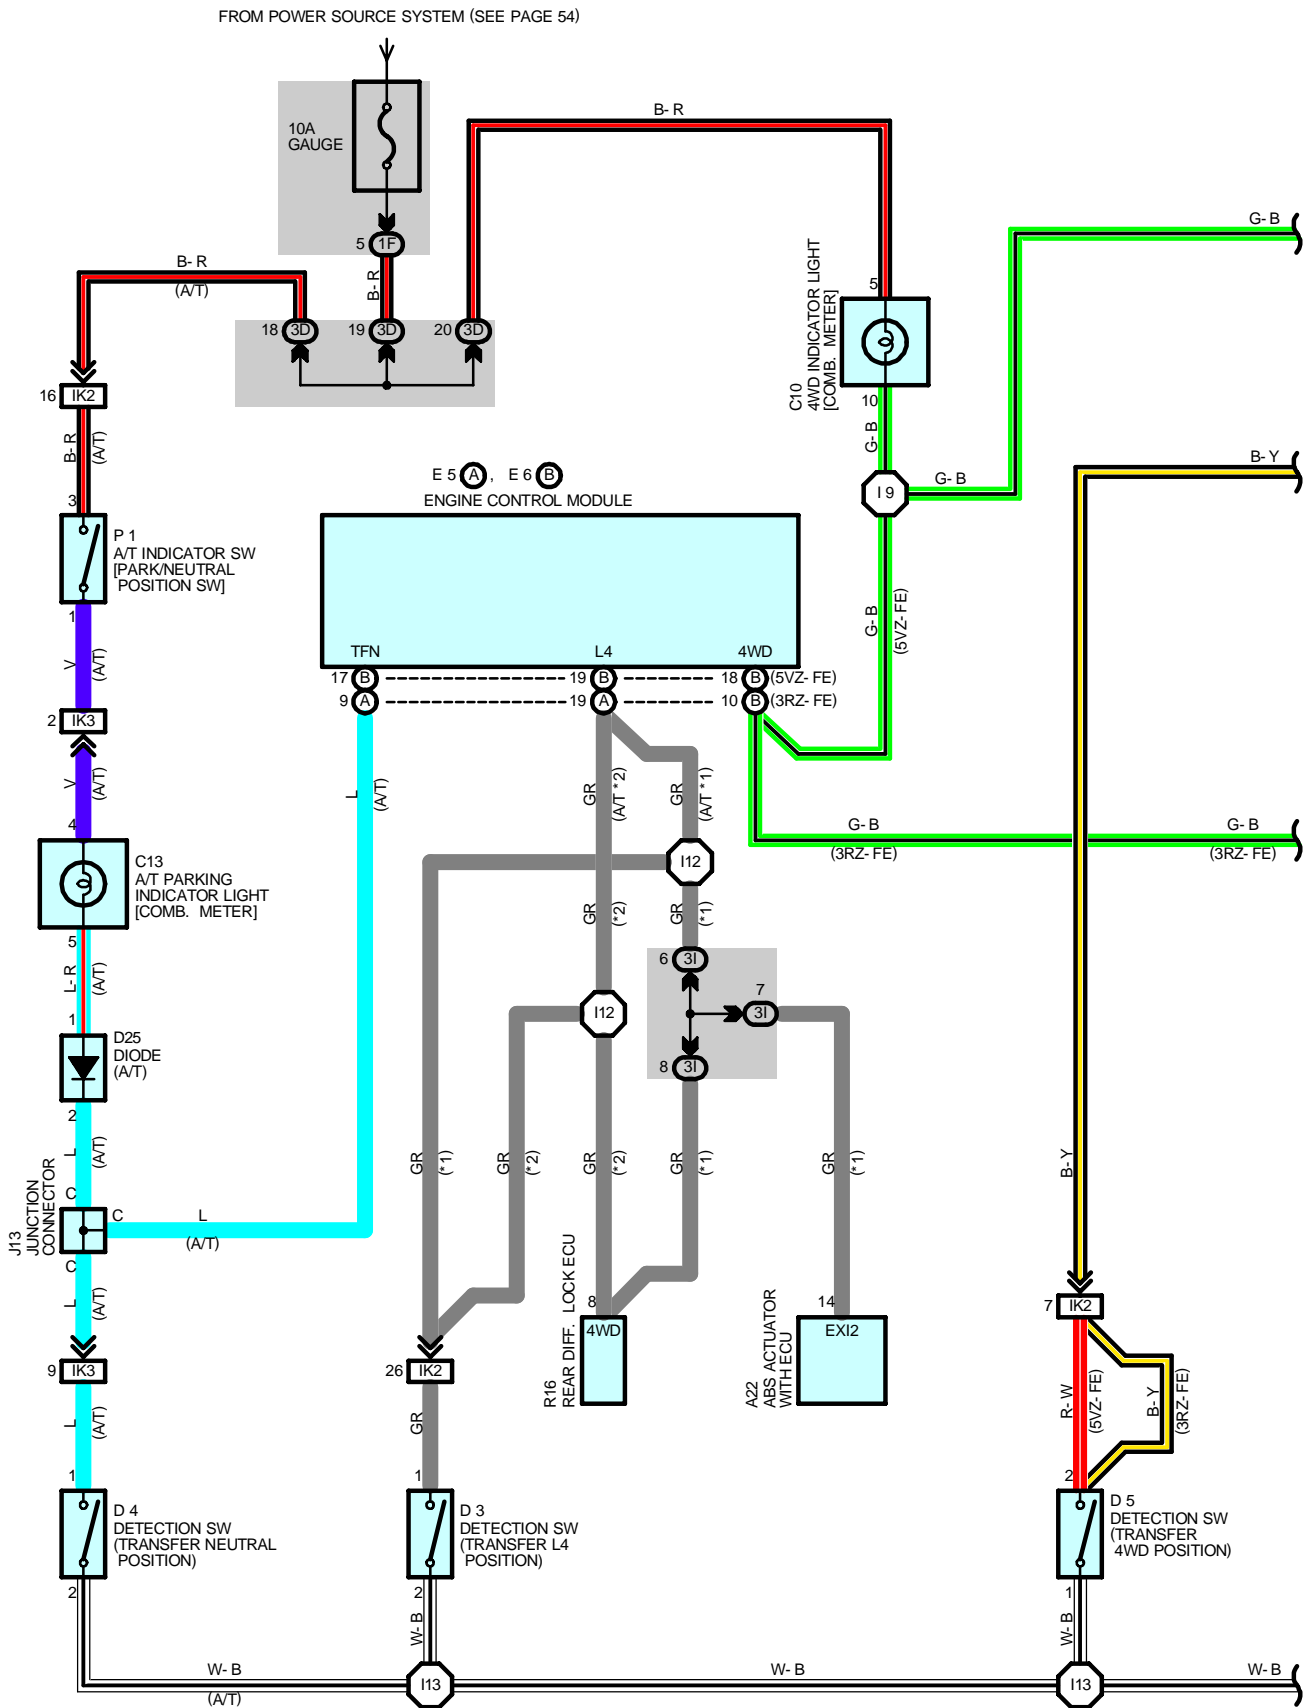

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

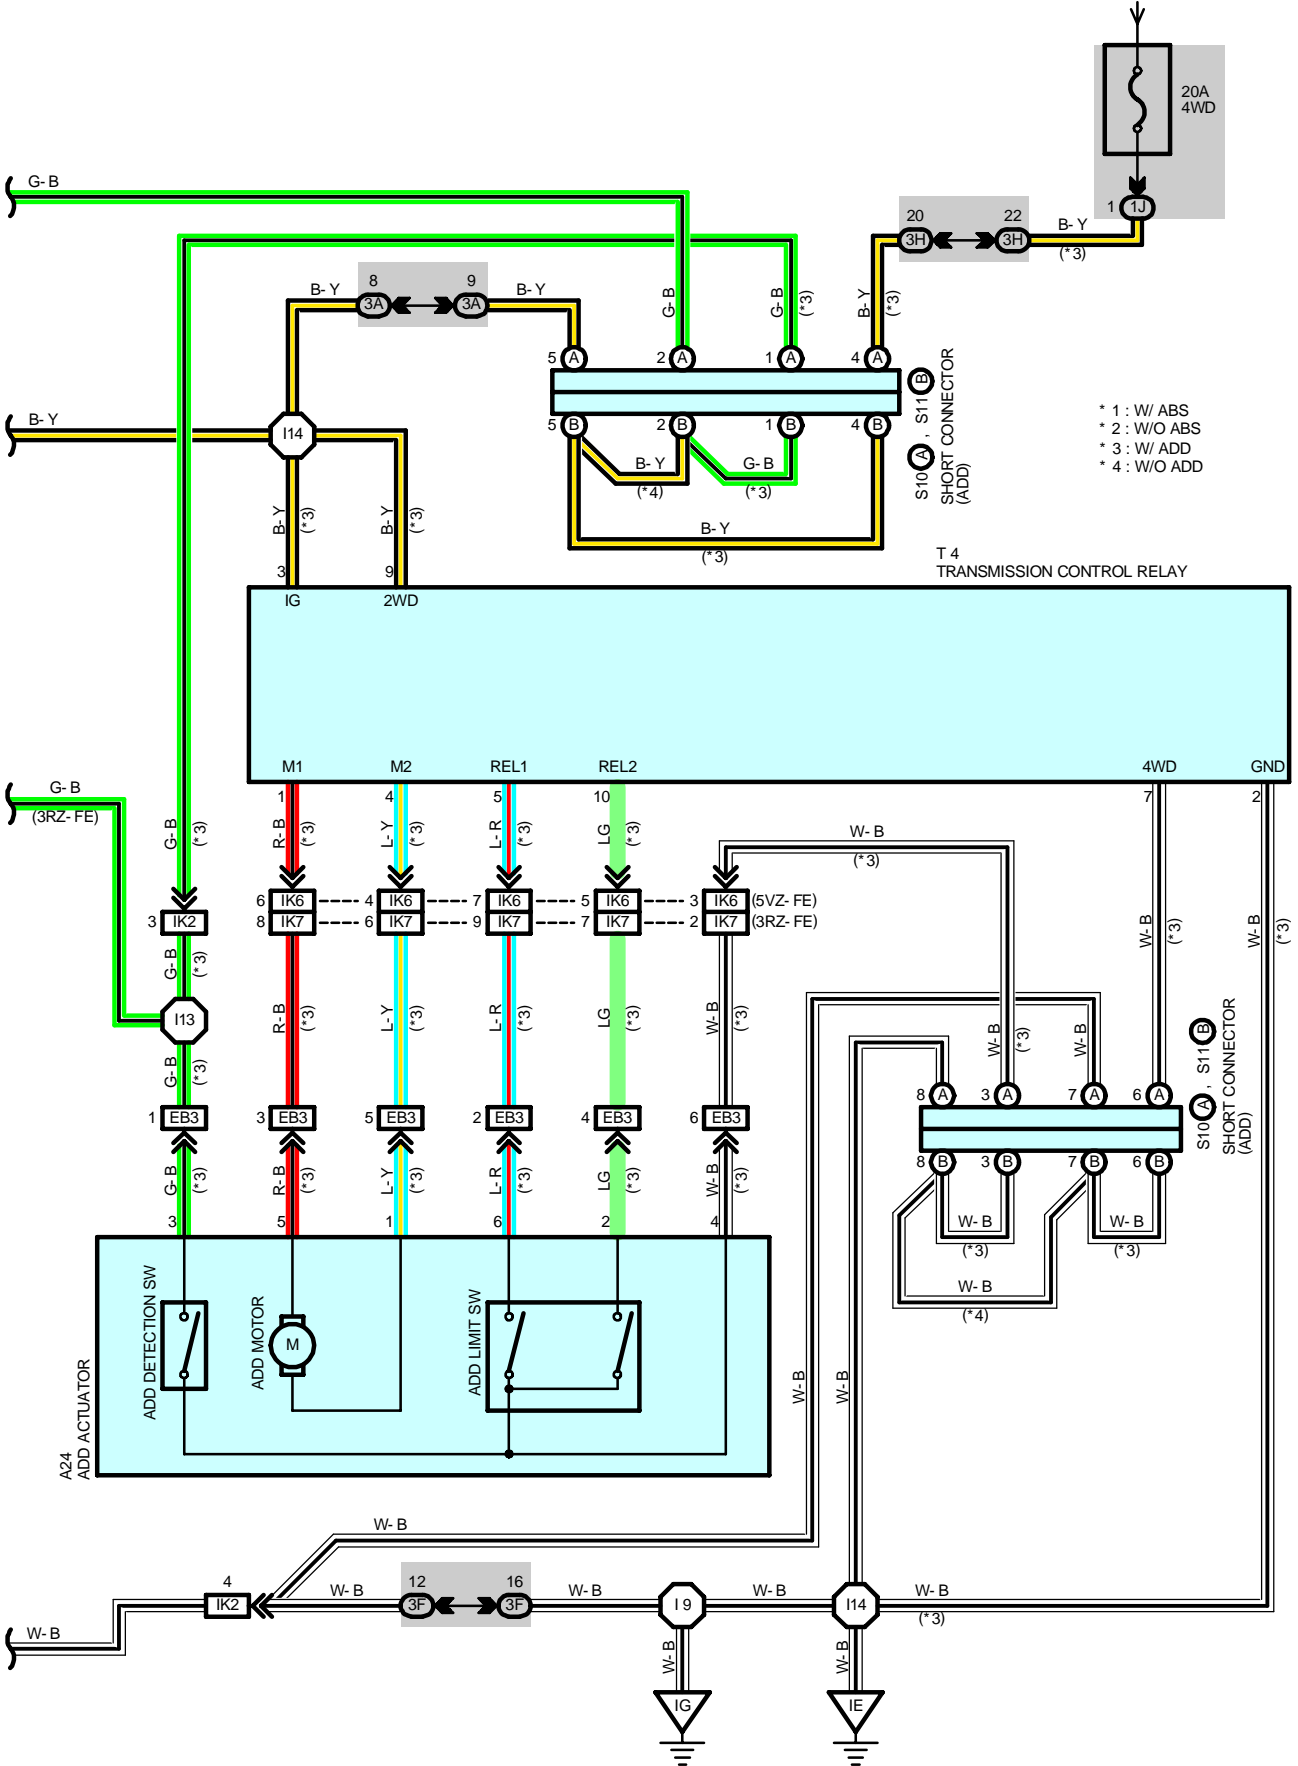

4WD (w/o 2-4 SELECT SW)

SERVICE HINTS

P1 A/T INDICATOR SW [PARK/NEUTRAL POSITION SW]

3-1 : Closed with A/T shift position at **P** position

D4 DETECTION SW (TRANSFER NEUTRAL POSITION)

1-2 : Closed with transfer position at **N** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A22	30 (5VZ-FE)	D4	30 (5VZ-FE)	P1	31 (5VZ-FE)
	32 (3RZ-FE)		32 (3RZ-FE)		33 (3RZ-FE)
A24	30 (5VZ-FE)	D5	30 (5VZ-FE)	R16	35
	32 (3RZ-FE)		32 (3RZ-FE)	S10 A	35
C10	34	D25	34	S11 B	35
C13	34	E5 A	35	T4	35
D3	30 (5VZ-FE)	E6 B	35		
	32 (3RZ-FE)	J13	35		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1J		
3A	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3D		
3F		
3H	26	Cowl Wire and J/B No.3 (Behind the Instrument Panel Center)
3I		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB3	40 (5VZ-FE)	Engine Wire and Differential Wire (Front Differential Upper Side)
	42 (3RZ-FE)	
IK2	44	Engine Wire and Cowl Wire (Above the Glove Box)
IK3		
IK6		
IK7		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	44	Around the Right Edge of the Reinforcement
IG	44	Around the Left Edge of the Reinforcement

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I9	44	Cowl Wire	I13	44	Engine Wire
I12			I14	44	Cowl Wire

