


CIGARETTE LIGHTER AND CLOCK

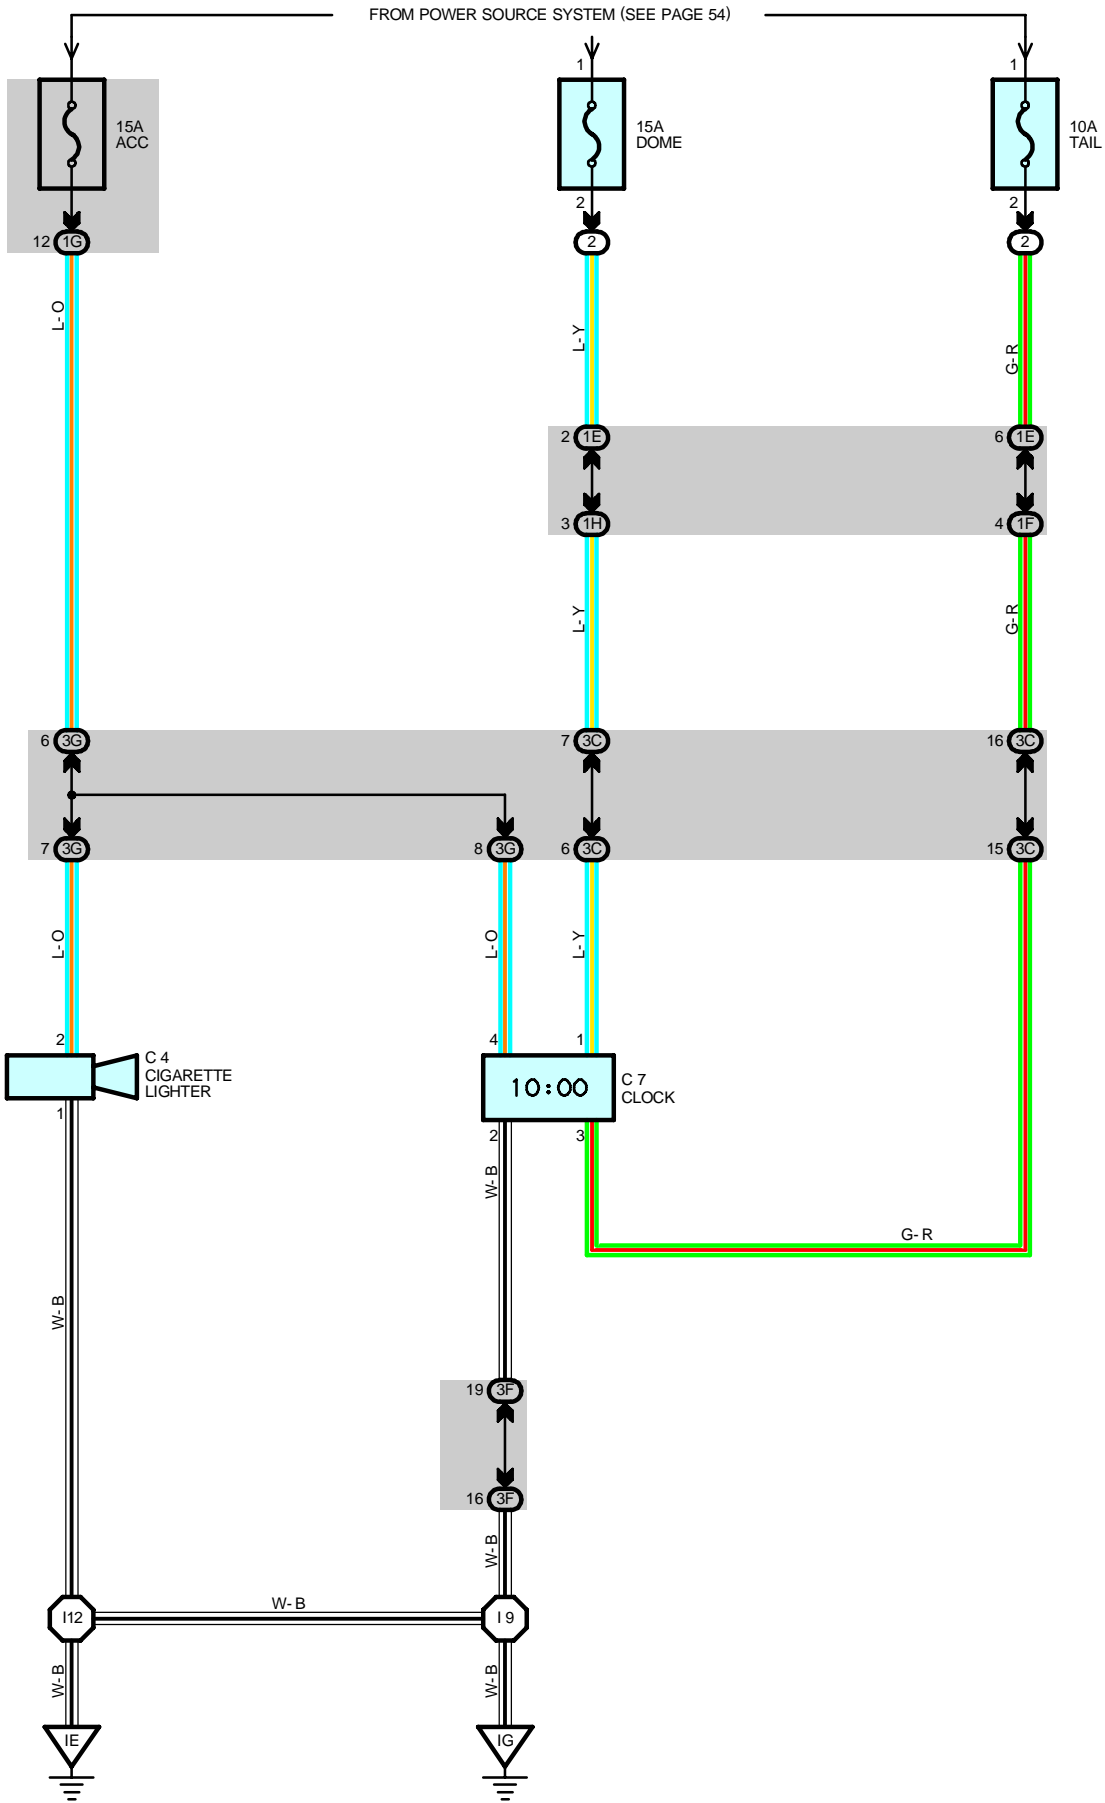

SERVICE HINTS

C4 CIGARETTE LIGHTER

2-GROUND : Approx. **12** volts with ignition SW at **ON** and **ACC** position

1-GROUND : Always continuity

C7 CLOCK

1-GROUND : Always approx. **12** volts (Power for clock)

4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position (Power for indication)

3-GROUND : Approx. **12** volts with light control SW at **TAIL** or **HEAD** position (Signal of indication)

2-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C4	34	C7	34		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	23	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
1F		
1G	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1H		
3C	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3F		
3G	26	Cowl Wire and J/B No.3 (Behind the Instrument Panel Center)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	44	Around the Right Edge of the Reinforcement
IG	44	Around the Left Edge of the Reinforcement

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I9	44	Cowl Wire	I12	44	Cowl Wire