



I GROUND POINT

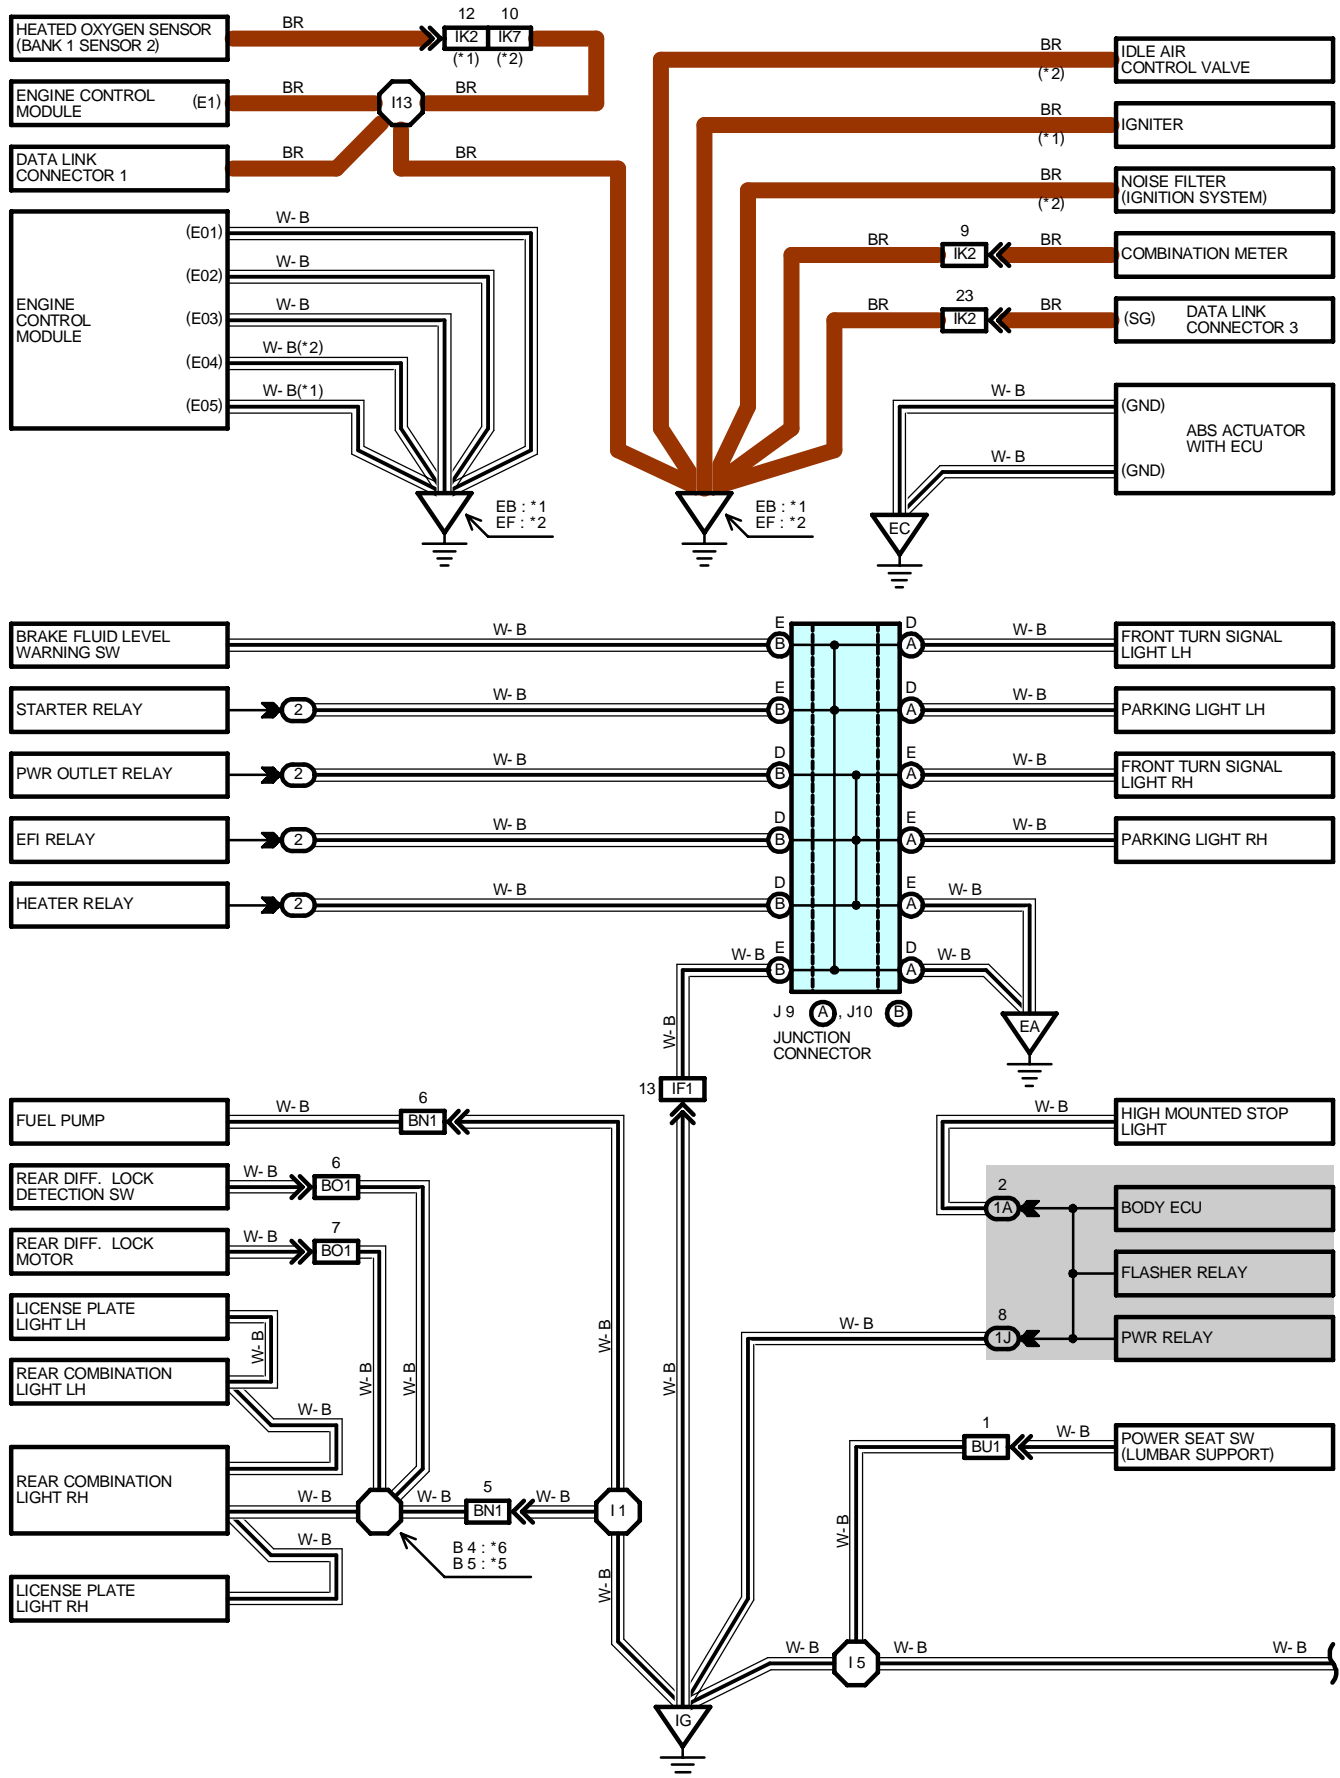

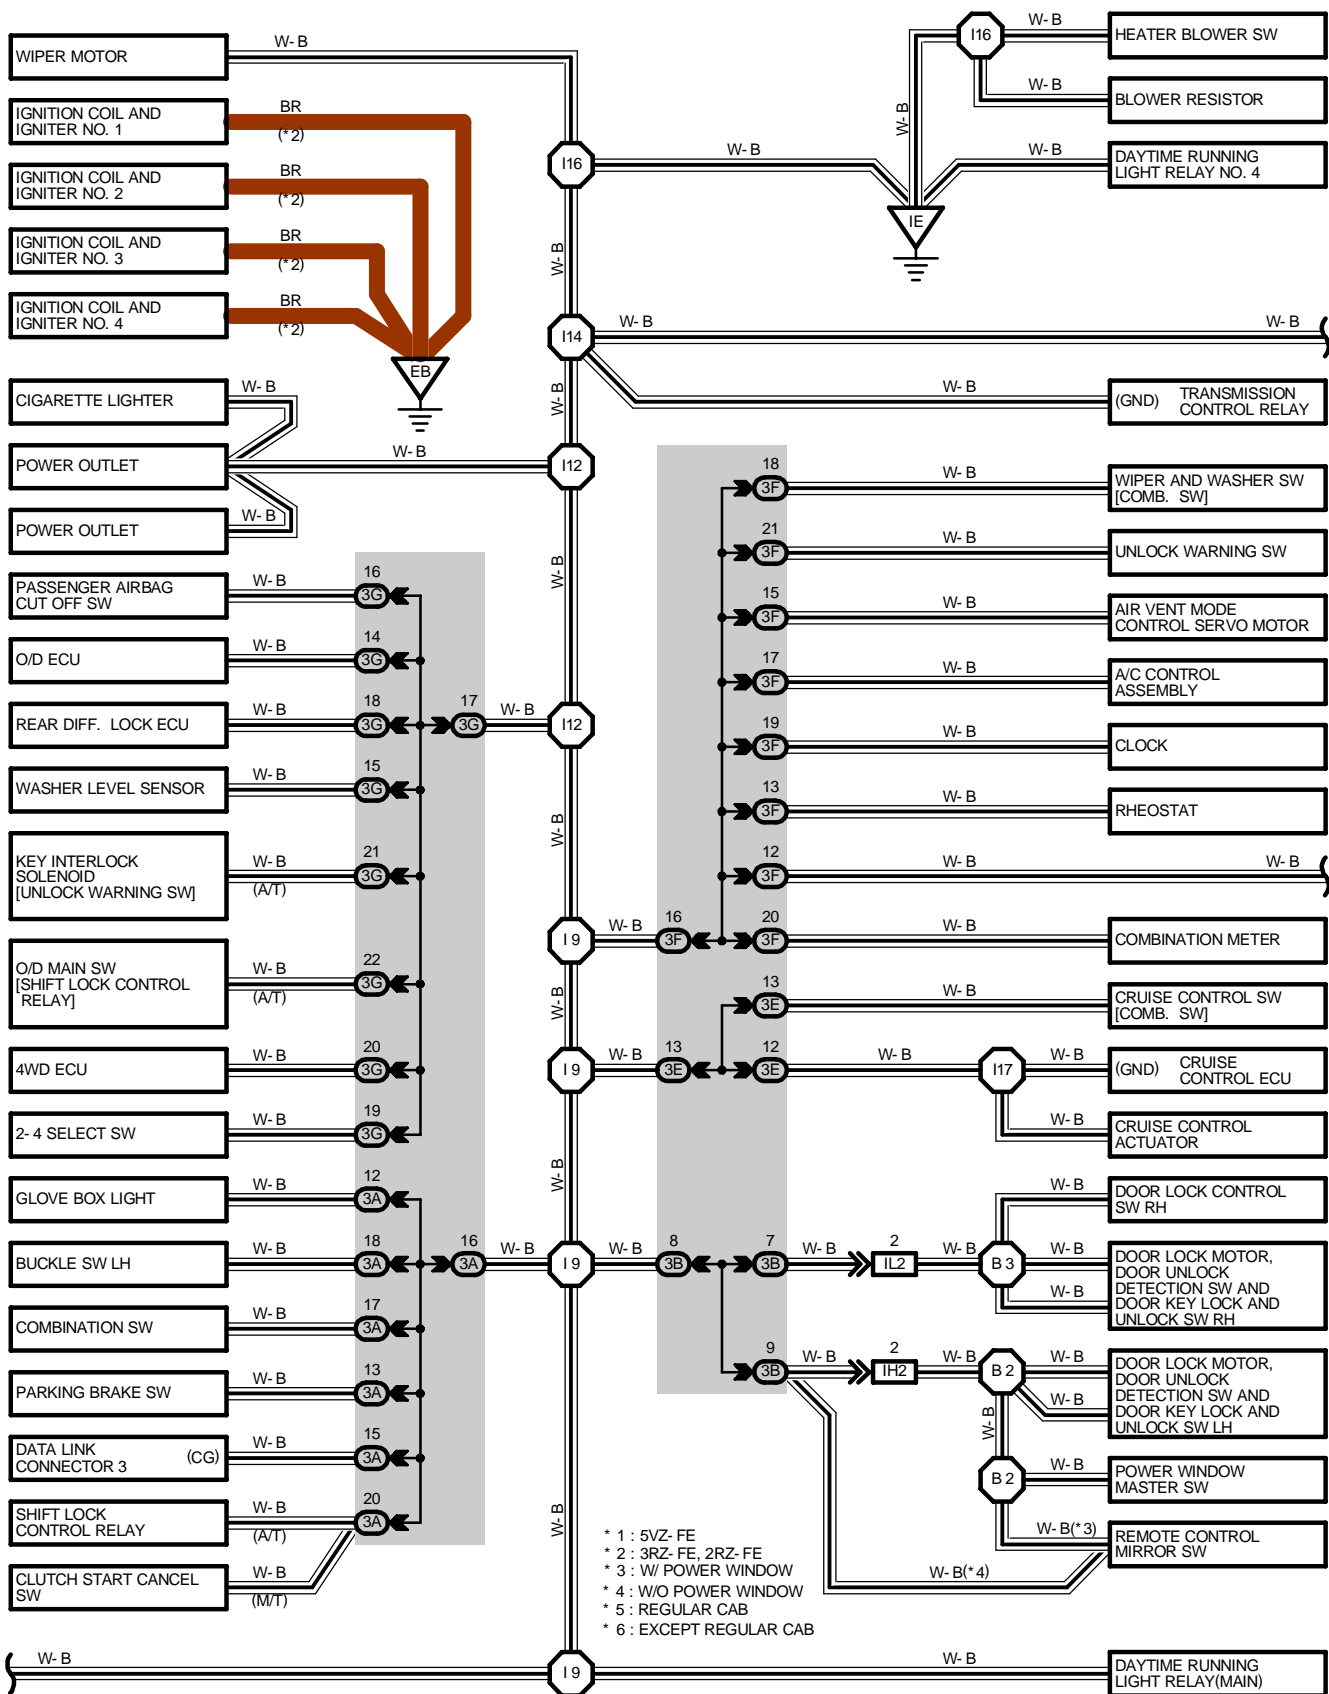

 : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
J9	A	33 (3RZ-FE, 2RZ-FE)	J10	B	33 (3RZ-FE, 2RZ-FE)	S10	A	35
		31 (5VZ-FE)			31 (5VZ-FE)			S11

 : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Roof Wire and J/B No.1 (Lower Finish Panel)
1J	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
3A	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3B		
3E		
3F		
3G	26	Cowl Wire and J/B No.3 (Behind the Instrument Panel Center)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB3	40 (5VZ-FE)	Engine Wire and Differential Wire (Front Differential Upper Side)
	42 (3RZ-FE, 2RZ-FE)	
IF1	44	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IH2	44	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IK2	44	Engine Wire and Cowl Wire (Above the Glove Box)
IK6		
IK7		
IL2	44	Front Door RH Wire and Cowl Wire (Right Kick Panel)
BN1	46 (Double Cab)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	48 (Except Double Cab)	
BO1	46 (Double Cab)	Frame Wire and Diff. Lock Wire (Rear Side Member LH)
	48 (Except Double Cab)	
BU1	50	Cowl Wire and Seat No.1 Wire (Under the Driver's Seat)

 : GROUND POINTS

Code	See Page	Ground Points Location
EA	40 (5VZ-FE)	Front Left Fender
	42 (3RZ-FE, 2RZ-FE)	
EB	40 (5VZ-FE)	Near the Throttle Body
	42 (3RZ-FE, 2RZ-FE)	Under the Data Link Connector 1
EC	40 (5VZ-FE)	Front Right Fender
	42 (3RZ-FE, 2RZ-FE)	
EF	42 (3RZ-FE, 2RZ-FE)	Ignition Coil Bracket
ID	44	Left Kick Panel
IE	44	Around the Right Edge of the Reinforcement
IG	44	Around the Left Edge of the Reinforcement
IH	44	Right Kick Panel

I GROUND POINT



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	44	Cowl Wire	B2	46 (Double Cab)	Front Door LH Wire
I5				48 (Except Double Cab)	
I9			B3	46 (Double Cab)	Front Door RH Wire
I12				48 (Except Double Cab)	
I13	44	Engine Wire	B4	46 (Double Cab)	Frame Wire
I14	44	Cowl Wire		48 (Except Double Cab)	
I16			B5	48 (Except Double Cab)	
I17					

