

# L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 5	A/C Magnetic Clutch	90980-11271	D 5	Detection SW (Transfer 4WD Position) [w/ 2-4 Select SW]	90980-11250
A 7	A/T Oil Temp. Sensor	90980-10498		Detection SW (Transfer 4WD Position) [w/o 2-4 Select SW]	90980-11156
A 9	ABS Deceleration Sensor	90080-98028	D 7	Data Link Connector 3	90080-98010
A13	A/C Dual Pressure SW	90980-10825	D 8	Daytime Running Light Relay (Main)	90980-12034
A15	A/C Thermistor	90980-10860	D 9	Daytime Running Light Relay No.4	82602-35160
A18	Airbag Squib (Steering Wheel Pad)	90980-10850	D13	Diode (Daytime Running Light System)	90980-10962
A19	Ashtray Illumination	81945-33010	D15	Door Courtesy SW Front LH	90980-10433
A21	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	D16	Door Courtesy SW Front RH	
A22	ABS Actuator with ECU	90980-11861	D20	Door Lock Control SW RH	90980-11013
A23	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	D21	Door Lock Motor, Door Unlock Detection SW and Door Key Lock and Unlock SW Front LH	90980-10897
A24	ADD Actuator	90980-11858		D22	
A25	A/C Control Assembly	90980-11877	D25	Diode (A/T)	90980-10962
A26	Air Inlet Control Servo Motor	90980-11165	D26	Door Courtesy SW Rear LH	90980-10433
A27	Air Mix Control Servo Motor	90980-10789	D27	Door Courtesy SW Rear RH	
A28	Air Vent Mode Control Servo Motor	90980-11321	D28	Door Lock Motor Rear LH	90980-11019
B 1	Back-Up Light SW	90980-11250	D29	Door Lock Motor Rear RH	
B 2	Brake Fluid Level Warning SW	90980-11207	E 1	EGR Gas Temp. Sensor	90980-10899
B 4	Blower Motor	90980-10214	E 2	Electronically Controlled Transmission Solenoid	90980-10919
B 5	Blower Resistor	90980-10171	E 3	Engine Coolant Temp. Sensor	90980-10737
B 6	Buckle SW LH	90980-10859	E 4	Electronically Controlled Transmission Pattern Select SW	90980-10601
C 1	Camshaft Position Sensor	90980-10947	E 5	Engine Control Module	90980-11638
C 2	Crankshaft Position Sensor (5VZ-FE)		E 6	Engine Control Module	90980-11637
	Crankshaft Position Sensor (3RZ-FE, 2RZ-FE)	90980-11016	E 7	Engine Control Module	90980-11476
C 3	Cruise Control Actuator	90980-11150	E 8	Engine Control Module	90980-11421
C 4	Cigarette Lighter	90980-10760	F 1	Front ABS Speed Sensor LH	90980-11075
C 5	Cigarette Lighter Illumination	90980-11148	F 2	Front ABS Speed Sensor RH	
C 6	Circuit Opening Relay	82602-35150	F 3	Front Turn Signal Light LH	90980-11020
C 7	Clock	90980-11013	F 4	Front Turn Signal Light RH	
C 8	Clutch Start Cancel SW	90980-11533	F 6	<b>4WD ECU</b>	90980-11423
C 9	Clutch Start SW	90980-10825	F 8	Fuel Pump and Sender	90980-11077
C10	Combination Meter	90980-11115	F 9	Front Airbag Sensor LH	90980-11898
C12	Combination Meter	90980-11114	F10	Front Airbag Sensor RH	
C13	Combination Meter	90980-11113	G 1	Generator	90980-09212
C14	Combination SW	90980-11672	G 2	Generator	90980-11349
C15	Combination SW	90980-11594	G 3	Glove Box Light	90980-11148
C16	Cruise Control Clutch SW	90980-10906	H 1	Headlight LH	90980-11314
C17	Cruise Control ECU	90980-11391	H 2	Headlight RH	
C19	Combination SW	90980-11616	H 5	Horn (Low)	90980-10619
C20	Center Airbag Sensor Assembly	90980-11871	H 6	Hazard SW	90980-10801
C21	Center Airbag Sensor Assembly	90980-11872	H 7	Heater Blower SW	90980-10877
C22	Center Airbag Sensor Assembly	90980-11873	H 8	High Mounted Stop Light	90980-11436
D 1	Data Link Connector 1 (5VZ-FE)	90980-11195			
	Data Link Connector 1 (3RZ-FE, 2RZ-FE)	90980-11323			
D 3	Detection SW (Transfer L4 Position)	90980-11156			
D 4	Detection SW (Transfer Neutral Position)	90980-10923			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
H 9	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	P 8	Power Window Motor Front LH	90980-11248
H10	Horn (High)	90980-10619	P 9	Power Window Motor Front RH	
I 1	Idle Air Control Valve	90980-11145	P10	Power Steering Oil Pressure SW	90980-11428
I 2	Igniter	90980-11653	P13	Power Outlet	90980-10760
I 3	Ignition Coil No.1	90980-11246	P14	Power Outlet	
I 4	Ignition Coil No.2				
I 5	Ignition Coil No.3				
I 6	Injector No.1		90980-11153	P19	Passenger Airbag Manual On/Off Indicator
I 7	Injector No.2				
I 8	Injector No.3				
I 9	Injector No.4				
I10	Injector No.5				
I11	Injector No.6				
I14	Ignition SW	90980-11615	P20	Passenger Airbag Manual On/Off SW	90980-12017
I16	Interior Light (Double, Extra Cab)	90980-10935	P21	Pretensioner LH	90980-12138
	Interior Light (Regular Cab)	90980-10121	P22	Pretensioner RH	
I20	Ignition Coil and Igniter No.1	90980-11885	P23	Power Seat Motor (Lumbar Support)	90980-10935
I21	Ignition Coil and Igniter No.2				
I22	Ignition Coil and Igniter No.3				
I23	Ignition Coil and Igniter No.4				
J 1	Junction Connector	90980-10803	P24	Power Seat SW (Lumbar Support)	90980-10127
J 9	Junction Connector	90980-11661	P25	Power Window Control SW Rear LH	90980-10631
J10	Junction Connector				
J11	Junction Connector	90980-11542	P26	Power Window Control SW Rear RH	90980-10860
J13	Junction Connector	90980-10803	P27	Power Window Motor Rear LH	
K 1	Knock Sensor	90980-11166	P28	Power Window Motor Rear RH	90980-10997
K 2	Knock Sensor 1				
K 3	Knock Sensor 2				
L 1	License Plate Light LH	90980-11162	R 1	Radio and Player	90980-10996
L 2	License Plate Light RH				
M 1	Mass Air Flow Meter	90980-11317	R 2	Radio and Player	90980-10216
N 1	Noise Filter (Ignition System)	90980-10843	R 3	Rheostat	90980-10214
O 1	O/D Solenoid	90980-11156	R 4	Rheostat	90980-10173
O 2	Oil Pressure SW	90980-11363	R 6	Rear Combination Light LH	
O 6	O/D ECU	90980-10799	R 7	Rear Combination Light RH	90980-11169
P 1	Park/Neutral Position SW (A/T Except 2RZ-FE)	90980-11784	R 8	Remote Control Mirror LH	
	Park/Neutral Position SW (2RZ-FE A/T)	90980-11332	R 9	Remote Control Mirror RH	
P 2	Parking Light LH	90980-11149	R10	Remote Control Mirror SW	90980-11657
P 3	Parking Light RH				
P 4	Parking Brake SW	90980-10825	R11	Rear ABS Speed Sensor LH	90980-11467
P 5	Personal Light	90980-10935	R12	Rear ABS Speed Sensor RH	
P 6	Power Window Control SW Front RH	90980-10789	R13	Rear Diff. Lock Detection SW	90980-11250
P 7	Power Window Master SW and Door Lock Control SW LH (Double Cab)	90980-10807	R14	Rear Diff. Lock Motor	90980-10631
	Power Window Master SW and Door Lock Control SW LH (Except Double Cab)	90980-10997	R15	Rear Diff. Lock SW	90980-10801
			R16	Rear Diff. Lock ECU	90980-11400
			S 1	Starter	90980-09584
			S 2	Starter (5VZ-FE)	90980-09506
				Starter (3RZ-FE, 2RZ-FE)	
			S 4	Shift Lock Control Relay and O/D Main SW	90980-11614
			S 5	Stop Light SW	90980-11118
			S 6	Speaker (Front Door LH)	90980-10916
			S 7	Speaker (Front Door RH)	
			S 8	Speaker (Rear LH) (Extra Cab)	90980-11299
				Speaker (Rear LH) (Double Cab, Regular Cab)	90980-10825
			S 9	Speaker (Rear RH) (Extra Cab)	90980-11299
				Speaker (Rear RH) (Double Cab, Regular Cab)	90980-10825
			S10	Short Connector (ADD)	90980-10799
			S11	Short Connector (ADD)	90980-10798
			T 1	Throttle Position Sensor	90980-11261



