



AIR INLET SERVOMOTOR INSPECTION

AC3FF-01

1. REMOVE GLOVE COMPARTMENT PARTS (See page [BO-52](#))
2. REMOVE AIR DUCT

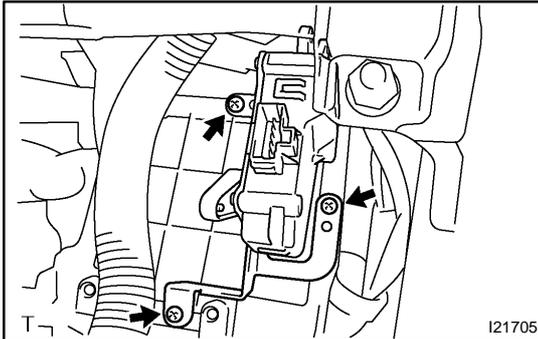

3. REMOVE AIR INLET SERVOMOTOR
 - (a) Disconnect the servomotor connector.
 - (b) Remove the 3 screws and servomotor.

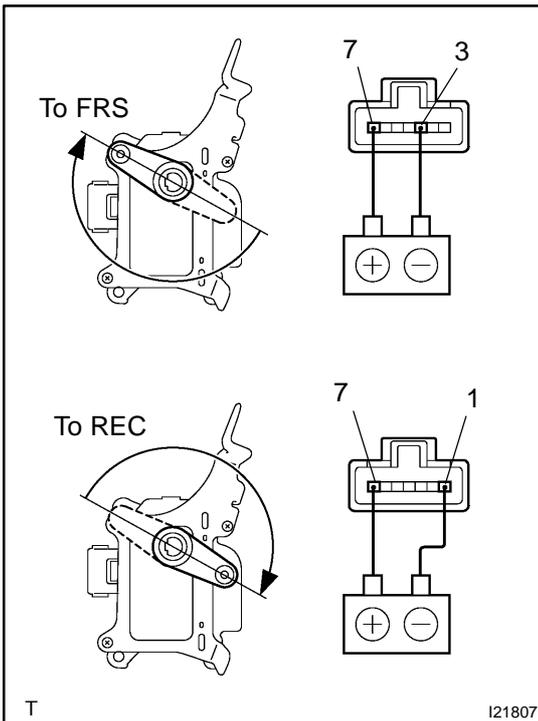


4. INSPECT AIR INLET SERVOMOTOR

Inspect servomotor operation.

- (1) Connect the positive (+) lead from the battery to terminal 7 and negative (-) lead to terminal 3, then check that the arm turns to "FRS" side smoothly.
- (2) Connect the positive (+) lead from the battery to terminal 7 and negative (-) lead to terminal 1, then check that the arm turns to "REC" side smoothly.

If operations are not as specified, replace the servomotor.

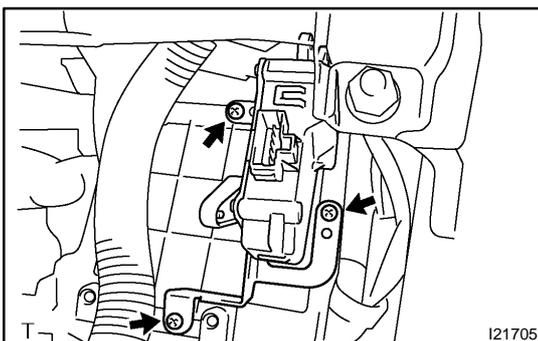

5. INSTALL AIR INLET SERVOMOTOR
 - (a) Install the servomotor with the 3 screws.
 - (b) Connect the servomotor connector.
6. INSTALL AIR DUCT
7. INSTALL GLOVE COMPARTMENT PARTS (See page [BO-55](#))