


DISASSEMBLY

1. REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

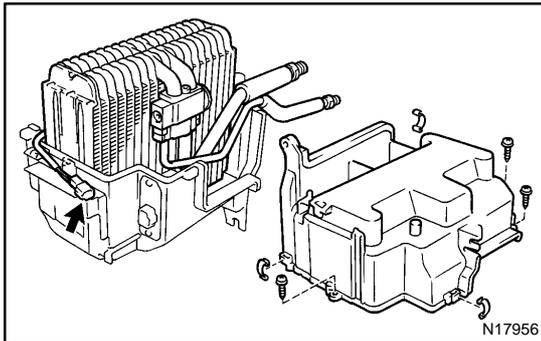

2. SEPARATE UPPER AND LOWER UNIT CASES

- Using a knife, cut off the each packing.
- Remove the 3 clips and 3 screws.
- Separate the upper and lower unit case.

3. REMOVE EVAPORATOR FROM LOWER UNIT CASE

HINT:


At the time of reassembly, please refer to the following item.
If evaporator is replaced, add compressor oil to compressor.

Add 40 – 50 cc (1.4 – 1.7 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent

4. REMOVE THERMISTOR

- Disconnect the connector clamp.
- Pull out the thermistor from evaporator.

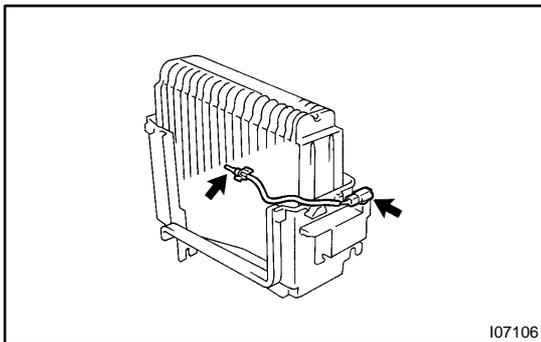

5. REMOVE EXPANSION VALVE

Using a hexagon wrench (5.0 mm, 0.20 in.), remove the 2 bolts and separate the expansion valve and evaporator and tubes.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

HINT:

At the time of reassembly, please refer to the following item.
Lubricate 4 new O-rings with compressor oil and install the tubes and valve.

