


COOLING UNIT ON-VEHICLE INSPECTION

AC3F9-01

INSPECT FOR LEAKAGE OF REFRIGERANT

- (a) Remove the glove compartment parts (See page [BO-52](#)).

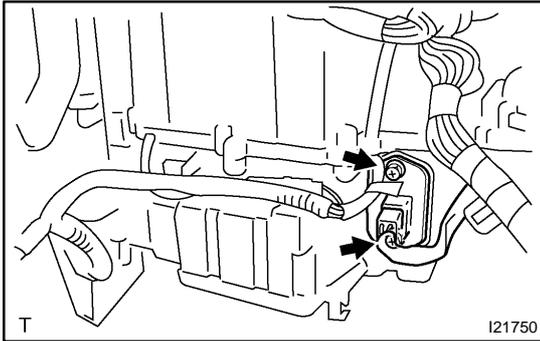

- (b) Remove the blower resistor.
(1) Disconnect the connector.
(2) Remove the 2 screws and blower resistor.
- (c) Using a gas leak detector, check for leakage.
If there is leakage, check the tightening torque at the joints or check the evaporator.
- (d) Install the blower resistor with the 2 screws.
- (e) Install the glove compartment parts (See page [BO-55](#)).