


## DRIVE BELT ON-VEHICLE INSPECTION

AC079-01

### 1. INSPECT DRIVE BELT'S INSTALLATION CONDITION

Check that the drive belt fits properly in the ribbed grooves.

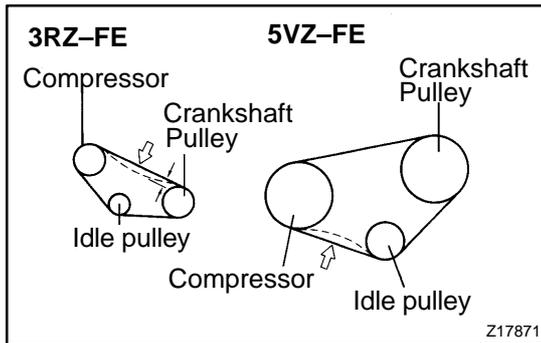

### 2. INSPECT DRIVE BELT TENSION

Using a belt tension gauge, check the drive belt tension.

**Drive belt tension:**

**New belt  $160 \pm 25$  lbf**

**Used belt  $100 \pm 20$  lbf**

HINT:

- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.
- After installing the drive belt, check that it fits properly in the ribbed grooves.

