


EVAPORATOR REMOVAL

AC088-01

1. REMOVE COOLING UNIT
(See page [AC-26](#))

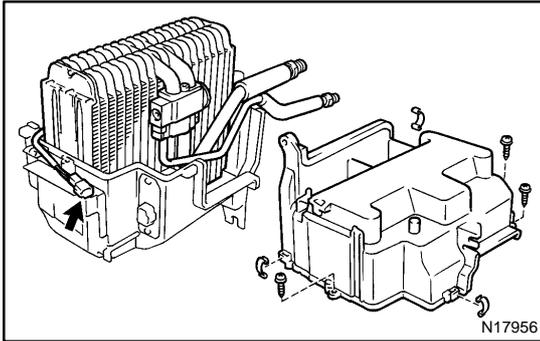

2. REMOVE EVAPORATOR

- (a) Using a knife, cut off each packing.
- (b) Remove the 3 screws and 3 clips, then separate the upper and lower case.
- (c) Disconnect the connector clamp.
- (d) Remove the evaporator.

HINT:

At the time of installation, please refer to the following item.
If evaporator is replaced, add compressor oil to evaporator.

Add 40 cc (1.4 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent