

EXPANSION VALVE

AC08E-01

ON-VEHICLE INSPECTION

1. CHECK QUANTITY OF GAS DURING REFRIGERATION CYCLE
2. SET ON MANIFOLD GAUGE SET
(See page [AC-19](#))
3. RUN ENGINE
 - (a) Run the engine at 1,500 rpm for at least 5 minutes.
 - (b) Then check that the high pressure reading is 1.37 – 1.57 MPa (14 – 16 kgf/cm², 199 – 228 psi).
4. CHECK EXPANSION VALVE

If the expansion valve is faulty, the low pressure reading will drop to 0 kPa (0 kgf/cm², 0 psi).

HINT:

When the low pressure drops to 0 kPa (0 kgf/cm², 0 psi), check the receiver's IN and OUT sides for no temperature difference.