


REMOVAL

1. REMOVE EVAPORATOR
(See page [AC-59](#))

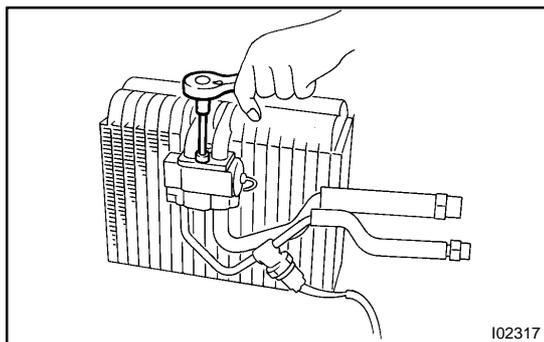

2. REMOVE EXPANSION VALVE

Using a hexagon wrench, remove the 2 bolts and separate the expansion valve and evaporator and tubes.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

HINT:

At the time of installation, please refer to the following item.

Lubricate 4 new O-rings with compressor oil and install the tubes and valve.