



REMOVAL

1. REMOVE CENTER LOWER COVER (See page [BO-52](#))

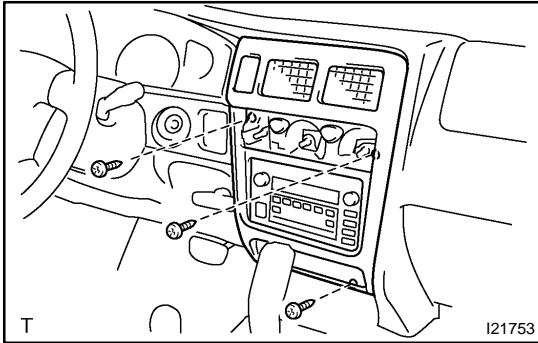

2. REMOVE CENTER CLUSTER FINISH PANEL (See page [BO-52](#))

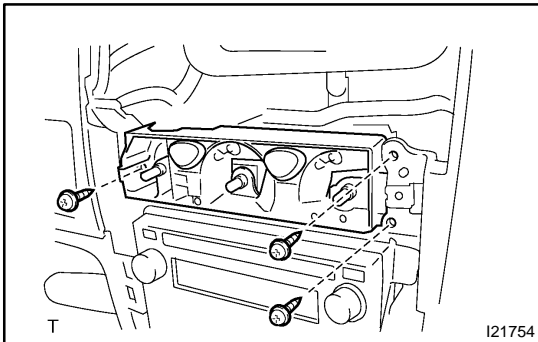

3. REMOVE HEATER CONTROL ASSEMBLY

Remove the 3 screws and pull out the heater control assembly, then disconnect the 2 connectors.