

DISASSEMBLY

1. REMOVE AIR MIX SERVOMOTOR (See page [AC-74](#))
2. REMOVE AIR OUTLET SERVOMOTOR (See page [AC-76](#))
3. REMOVE HEATER RADIATOR
 - (a) Remove the 5 screws and 2 plates and clamp.
 - (b) Pull out the heater radiator.
 - (c) Remove the 2 screws and 2 clips, then disconnect the heater radiator pipes.

HINT:

At the time of reassembly, please refer to the following item.

Do not reuse 2 O-rings.

4. REMOVE AIR VENT DUCT

Remove the 2 screws and duct.