


REMOVAL

1. REMOVE COOLING UNIT (See page AC-26)
2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

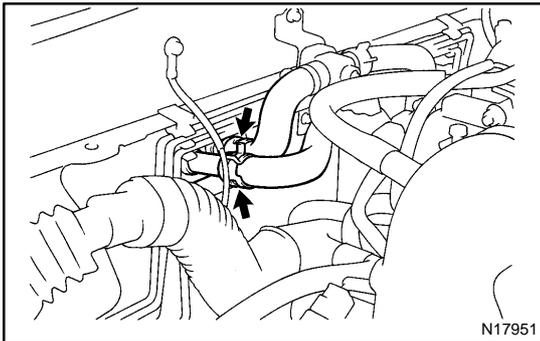

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Using pliers, grip the claw of the hose clip and slide the clip along the hose
- (b) Disconnect the water hoses from the heater radiator pipes.

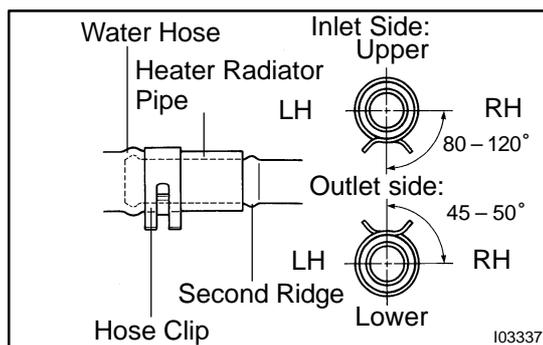


HINT:

At the time of installation, please refer to the following items.

- Push the water hose onto the heater radiator pipe as far as the second ridge on the pipe.
- Install the hose clip in the position, as shown in the illustration.

4. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page BO-52)
5. REMOVE DEFROSTER NOZZLE AND HEATER TO REGISTER DUCT
6. DISCONNECT AIR OUTLET SERVOMOTOR CONNECTOR
7. DISCONNECT AIR MIX SERVOMOTOR CONNECTOR

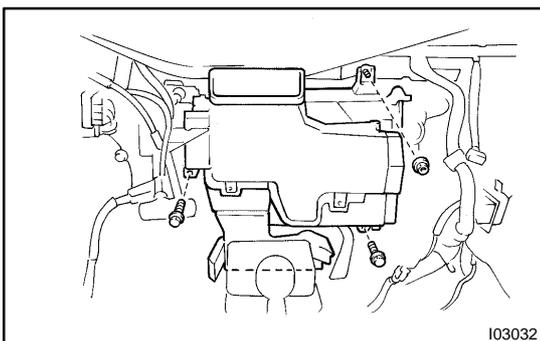

8. REMOVE HEATER UNIT

Remove the 2 bolts, nut and heater unit.