



HEATER MAIN RELAY INSPECTION

AC08X-01

INSPECT HEATER MAIN RELAY (Making: HTR) CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 5	Continuity
Apply B+ between terminals 3 and 5	1 - 2	Continuity

If continuity is not as specified, replace the relay.