



PRESSURE SWITCH ON-VEHICLE INSPECTION

AC08U-02

1. SET ON MANIFOLD GAUGE SET (See page AC-19)
2. REMOVE GLOVE COMPARTMENT PARTS (See page BO-52)
3. DISCONNECT CONNECTOR FROM COOLING UNIT
4. SET VEHICLE IN THESE CONDITIONS:
 - (a) Running engine at 2,000 rpm
 - (b) Blower speed control switch at HI
 - (c) Temperature control lever MAX. COOL
 - (d) A/C switch ON

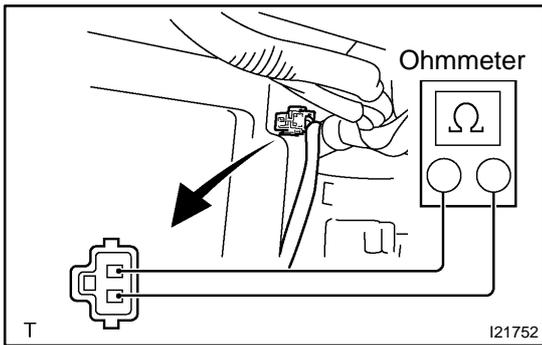

5. INSPECT PRESSURE SWITCH OPERATION
 - (a) Disconnect the pressure switch connector.
 - (b) Using an ohmmeter, check that there is continuity between the terminals.

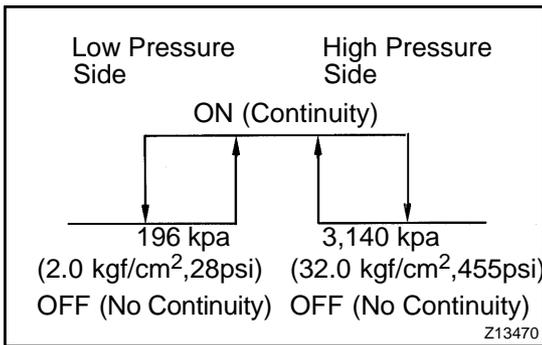

- (c) When refrigerant pressure is changed, as shown in the illustration.
- If operation is not as specified, replace the pressure switch.