


REMOVAL

1. REMOVE EVAPORATOR (See page AC-59)

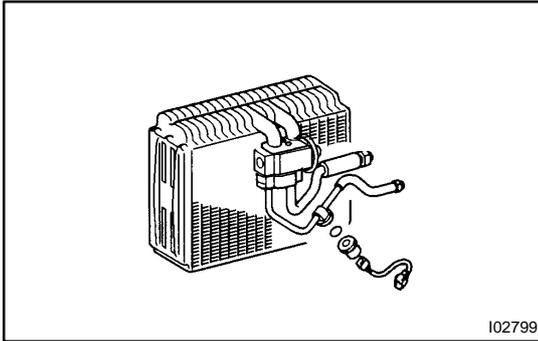

2. REMOVE PRESSURE SWITCH FROM LIQUID TUBE

- (a) Disconnect the pressure switch connector.
- (b) Remove the pressure switch and O-ring.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

HINT:

- Lock the switch mounted on the tube with an open end wrench, being careful not to deform the tube and remove the switch.
- At the time of installation, please refer to the following item.

Lubricate a new O-ring with the compressor oil and install the switch.