

## REMOVAL


### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

- Evacuate air from refrigeration system.
- Charge system with refrigerant and inspect for leakage of refrigerant.

**Specified amount: 600 ± 50 g (21.16 ± 1.76 oz.)**

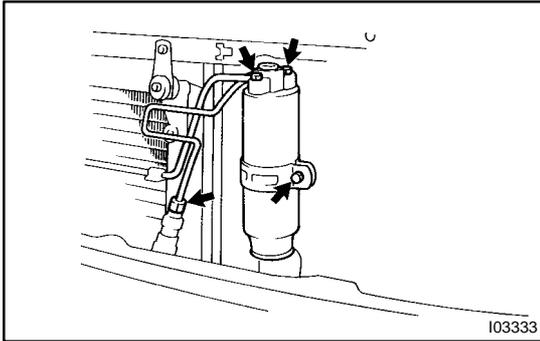

### 2. DISCONNECT LIQUID TUBE BETWEEN RECEIVER AND COOLING UNIT

Remove the bolt and disconnect the liquid tube.

**Torque: 6.0 N·m (60 kgf·cm, 52 in.-lbf)**

**NOTICE:**

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

HINT:

At the time of installation, lubricate a new O-ring with compressor oil and install the tube.

### 3. REMOVE LIQUID TUBE BETWEEN RECEIVER AND CONDENSER

- (a) Loosen the nut and disconnect the liquid tube from condenser.

**Torque: 14 N·m (140 kgf·cm, 10 ft-lbf)**

- (b) Remove the 2 bolts and disconnect the both tubes.

**Torque: 6.0 N·m (60 kgf·cm, 52 in.-lbf)**

**NOTICE:**

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

HINT:

At the time of installation, lubricate 3 new O-rings with compressor oil and install the tube.

### 4. REMOVE RECEIVER FROM RECEIVER HOLDER

Remove the holder bolt and pull the receiver upward from the holder

HINT:

At the time of installation, add compressor oil to receiver when the receiver is replaced.

**Add 20 cc (0.71 fl.oz.)**

**Compressor oil: ND-OIL 8 or equivalent**