


THERMISTOR ON-VEHICLE INSPECTION

AC08Q-02

1. REMOVE GLOVE COMPARTMENT PARTS (See page [BO-52](#))

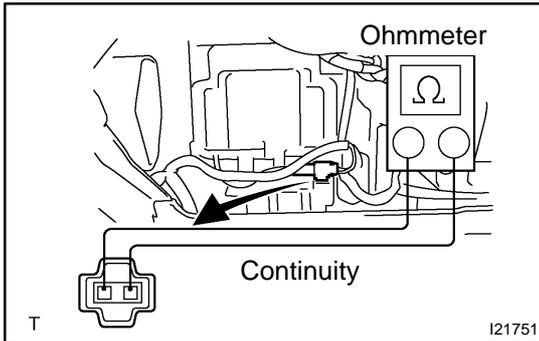

2. **INSPECT THERMISTOR RESISTANCE**

- (a) Disconnect the connector from the thermistor.
- (b) Using an ohmmeter, check that there is continuity between the terminals.

Standard resistance: 1,500 Ω at 25 °C (77 °F)

If resistance is no continuity, proceed next inspection.