


## REMOVAL

### 1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:


It is not necessary to drain out all the coolant.

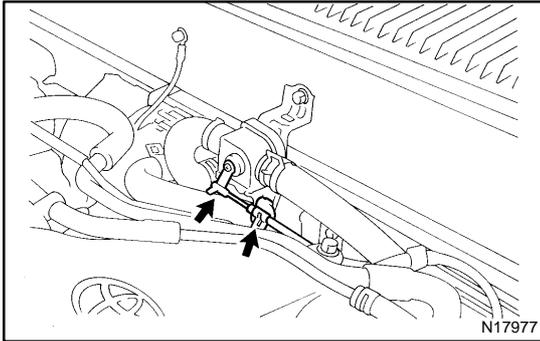

### 2. DISCONNECT WATER VALVE CONTROL CABLE FROM WATER VALVE


HINT:

At the time of installation, please refer to the following item  
For installing the control cable, refer to "INSTALLATION" of  
HEATER CONTROL ASSEMBLY on page [AC-95](#).

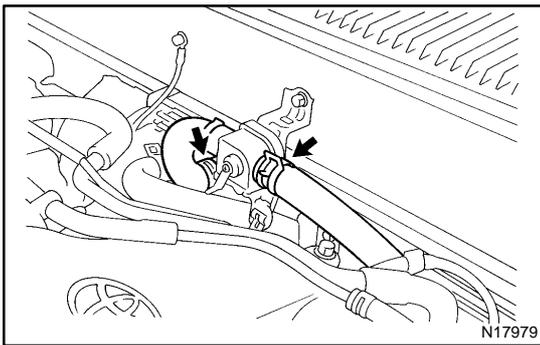


### 3. DISCONNECT WATER HOSES

- Using pliers, grip the claws of the clip and slide the clip along the hose.
- Disconnect the water hose.

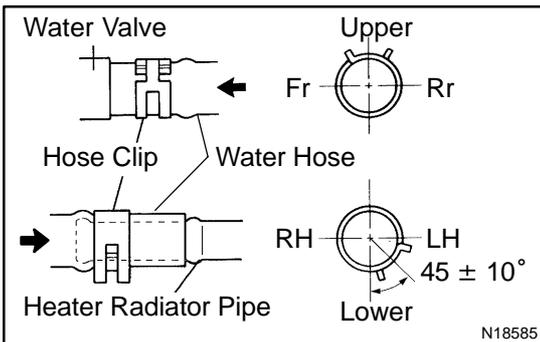

HINT:

At the time of installation, please refer to the following item.  
Install the hose clip in the position, as shown in the illustration.

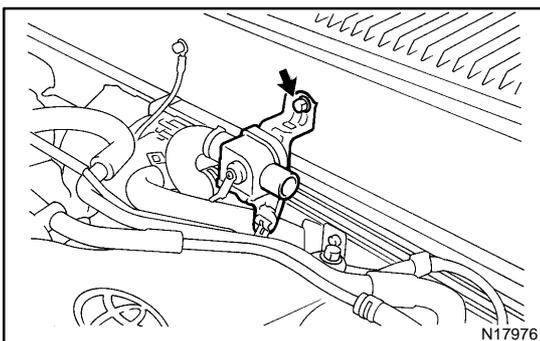

### 4. REMOVE WATER VALVE

Remove the bolt and water valve.