



ATF TEMPERATURE SENSOR ON-VEHICLE INSPECTION

AT00T-02

1. **DISCONNECT ATF TEMPERATURE SENSOR CONNECTOR**
2. **DISCONNECT OIL COOLER PIPE**
 - (a) Remove the 3 bolts and clamps.

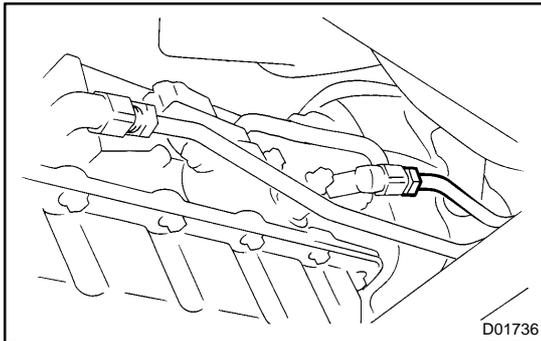

- (b) Disconnect the oil cooler pipe.
3. **REMOVE OIL COOLER ELBOW**

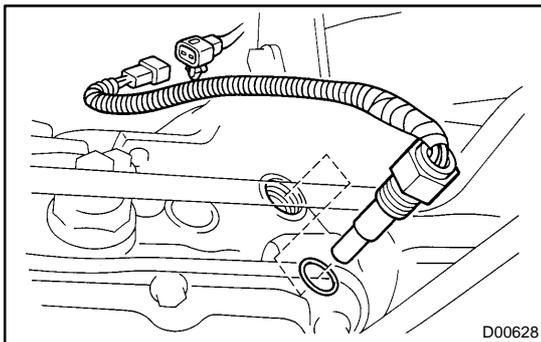

4. **REMOVE ATF TEMPERATURE SENSOR**
 - (a) Remove the ATF temperature sensor.
 - (b) Remove the O-ring from the ATF temperature sensor.
5. **INSTALL ATF TEMPERATURE SENSOR**
 - (a) Coat a new O-ring with ATF and install it to the ATF temperature sensor.
 - (b) Install the ATF temperature sensor.
Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)
6. **INSTALL OIL COOLER ELBOW**
7. **CONNECT OIL COOLER PIPE**
 - (a) Connect the oil cooler pipe
Torque: 34 N·m (350 kgf-cm, 25 ft-lbf)
 - (b) Install the 3 clamps and bolts.
8. **CONNECT ATF TEMPERATURE SENSOR**

NOTICE:

Be careful not to twist the wire harness.