



## PARKING LOCK PAWL ON-VEHICLE REPAIR

AT00X-02


1. REMOVE VALVE BODY (See page [AT-10](#))
2. REMOVE PARKING LOCK PAWL BRACKET

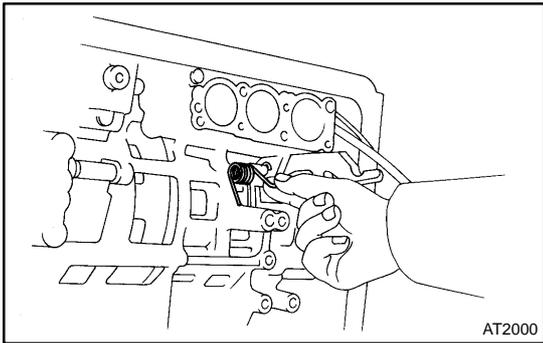


3. REMOVE SPRING FROM PARKING LOCK PAWL SHAFT

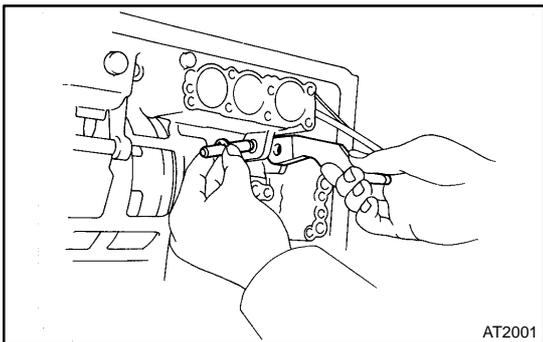

4. REMOVE PARKING LOCK PAWL AND SHAFT
5. INSTALL PARKING LOCK PAWL AND SHAFT

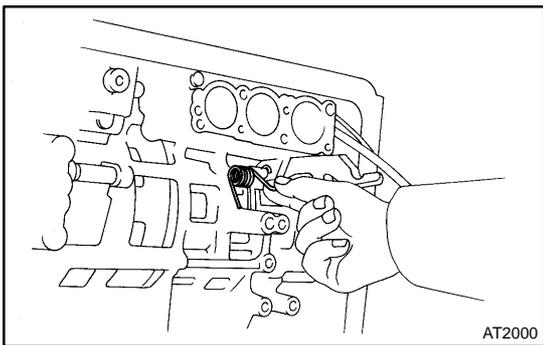

6. INSTALL SPRING TO PARKING LOCK PAWL SHAFT

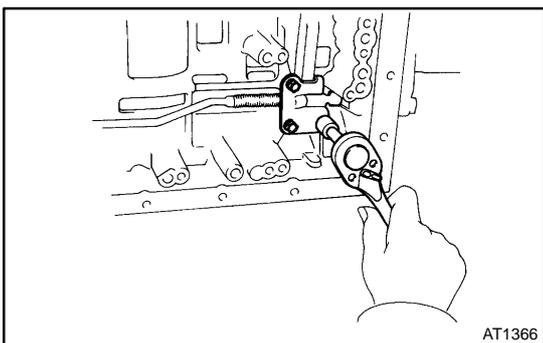

7. INSTALL PARKING LOCK PAWL BRACKET  
Torque: 7.4 N·m (75 kgf·cm, 65 in.-lbf)

**HINT:**

- Push the lock rod fully forward.
  - Check that the parking lock pawl operates smoothly.
8. INSTALL VALVE BODY (See page [AT-10](#))