


PARK/NEUTRAL POSITION (PNP) SWITCH


ON-VEHICLE REPAIR

AT00W-02

1. DISCONNECT 2 OIL COOLER PIPES
(See page A340E: [AT-24](#), A340F: [AT-30](#))

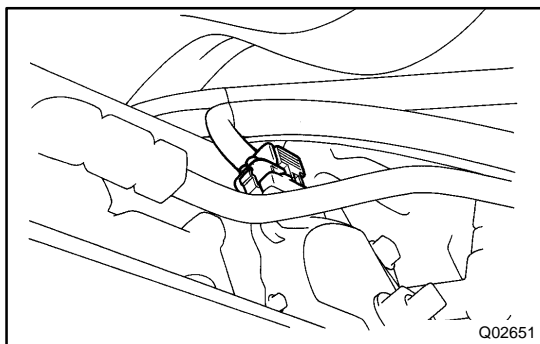

2. DISCONNECT PARK/NEUTRAL POSITION SWITCH CONNECTOR
3. REMOVE PARK/NEUTRAL POSITION SWITCH
 - (a) Pry off the lock washer and remove the nut.

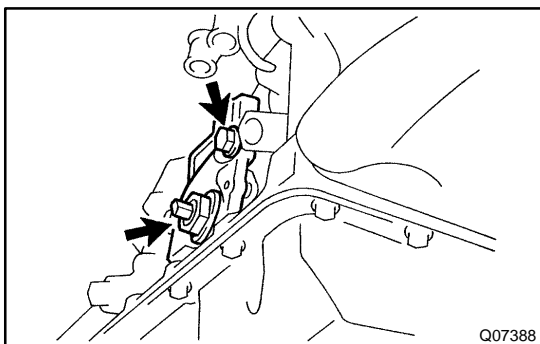

- (b) Remove the bolt and pull out the park/neutral position switch.
4. INSTALL AND ADJUST PARK/NEUTRAL POSITION SWITCH (See page [DI-456](#))
Torque:
Nut: 6.9 N·m (70 kgf·cm, 61 in.-lbf)
Bolt: 13 N·m (130 kgf·cm, 9 ft·lbf)
5. CONNECT PARK/NEUTRAL POSITION SWITCH CONNECTOR
6. CONNECT 2 OIL COOLER PIPES
(See page A340E: [AT-24](#), A340F: [AT-30](#))