


AUTOMATIC TRANSMISSION SYSTEM OPERATION

AT018-01

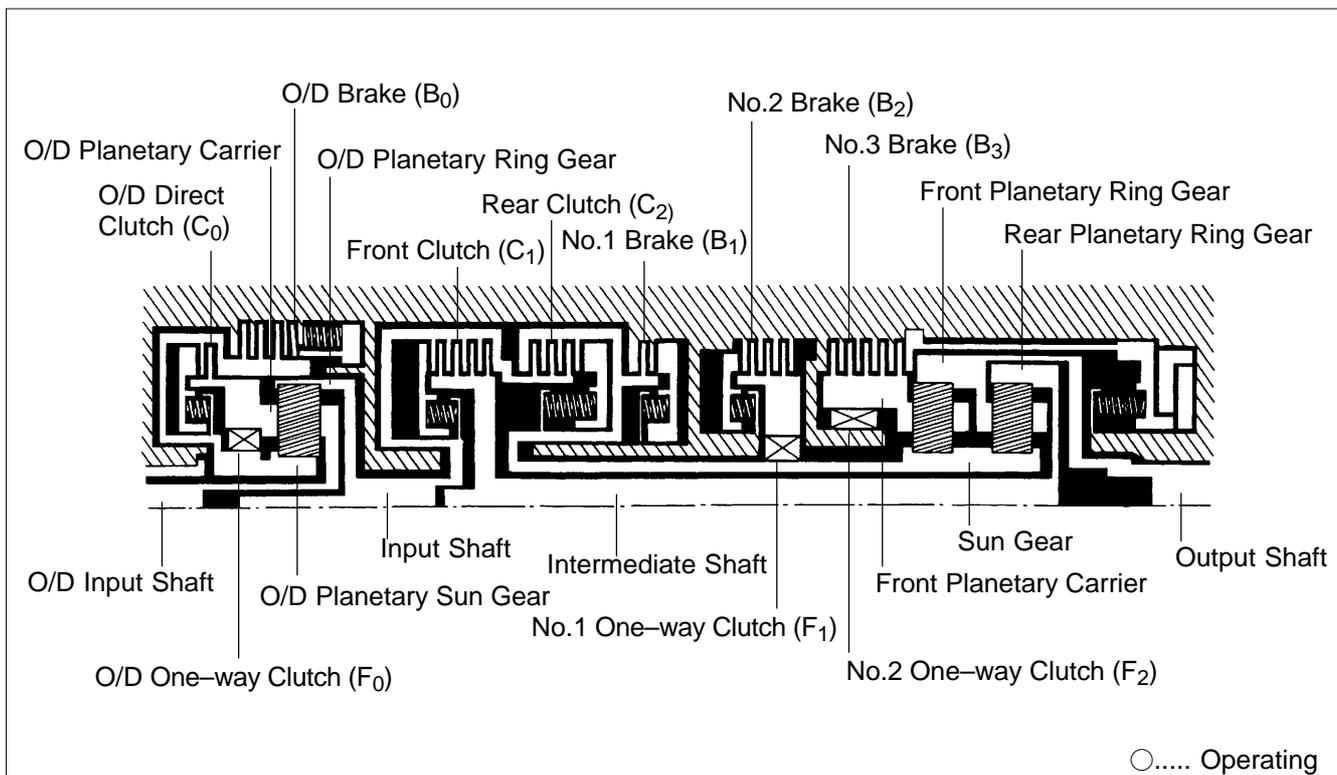

Shift lever position	Gear position	C ₀	C ₁	C ₂		B ₀	B ₁	B ₂	B ₃		F ₀	F ₁	F ₂
				I.P.	O.P.				I.P.	O.P.			
P	Parking	○							○	○	○		
R	Reverse	○		○	○				○	○	○		
N	Neutral	○									○		
D	1st	○	○								○		○
	2nd	○	○					○			○	○	
	3rd	○	○		○			○			○		
	O/D		○		○	○		○					
2	1st	○	○								○		○
	2nd	○	○				○	○			○	○	
L	1st	○	○						○	○	○		○

I.P.: Inner Piston
O.P.: Outer Piston

D00790