



INSTALLATION

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter housing.

Correct distance: More than 31.75 mm (1.2500 in.)

2. INSTALL TRANSMISSION

Installation is in the reverse order of removal. (See page [AT-33](#))

HINT:

- After installation, adjust the shift lever position and throttle cable (See page [AT-2](#)).
- Fill and check fluid level (See page [AT-2](#)).