

EXTENSION HOUSING OIL SEAL ON-VEHICLE REPAIR

AT01B-03


1. REMOVE PROPELLER SHAFT (See page [PR-3](#))
2. REMOVE REAR OIL SEAL

Using SST, remove the oil seal.

SST 09308-10010

NOTICE:

Clean the extension housing before removing the oil seal.

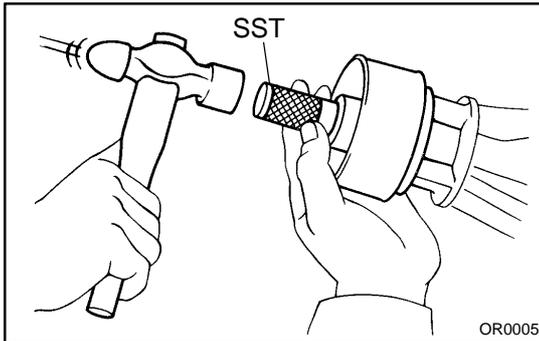

3. INSTALL NEW OIL SEAL

Coat the lip of a new oil seal with MP grease and using SST and a hammer, carefully drive the oil seal in as far as it will go.

SST 09325-20010

4. INSTALL PROPELLER SHAFT (See page [PR-8](#))
5. CHECK FLUID LEVEL (See page [AT-2](#))