


INSPECTION

INSPECT RADIO RECEIVER ASSEMBLY CIRCUIT

Connect the connectors to the radio receiver assembly, and inspect the connector on the wire harness side.

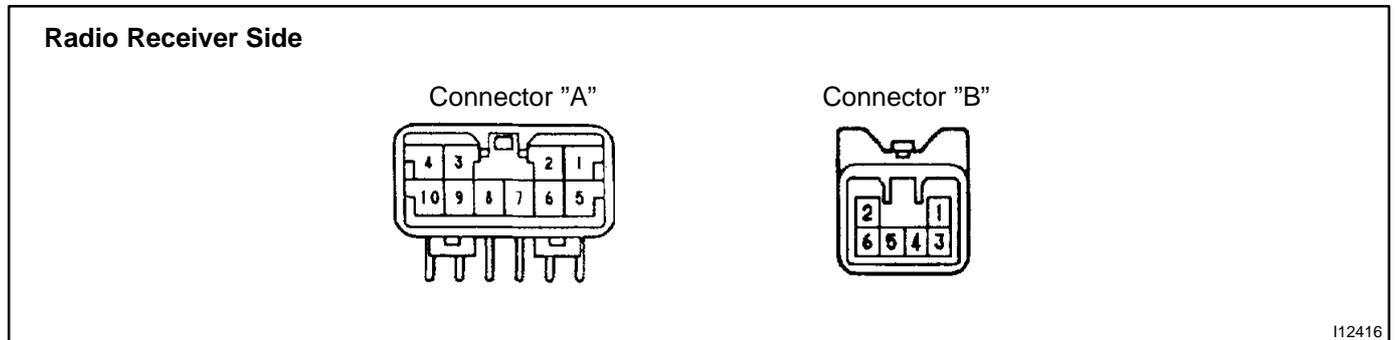

Tester connection	Condition	Specified condition
A1 – Ground (FR+)	Audio sounding	5 – 7 V
A2 – Ground (FL+)	Audio sounding	5 – 7 V
A3 – Ground (ACC)	Ignition switch ACC	Battery positive voltage
A4 – Ground (+B)	Constant	Battery positive voltage
A5 – Ground (FR–)	Audio sounding	5 – 7 V
A6 – Ground (FL–)	Audio sounding	5 – 7 V
A7 – Ground (GND)	Constant	Continuity
A10 – Ground (ILL+)	Light control switch TAIL or HEAD	Battery positive voltage
B1 – Ground (RR+)	Audio sounding	5 – 7 V
B2 – Ground (RL+)	Audio sounding	5 – 7 V
B3 – Ground (RR–)	Audio sounding	5 – 7 V
B6 – Ground (RL–)	Audio sounding	5 – 7 V

If the circuit is not as specified, inspect the circuits connected to other parts.