


## INSPECTION

### 1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	-	No continuity
ACC	2-3	Continuity
ON	2-3-4 6-7	Continuity
START	1-2-4 6-7-8	Continuity

If continuity is not as specified, replace the switch.

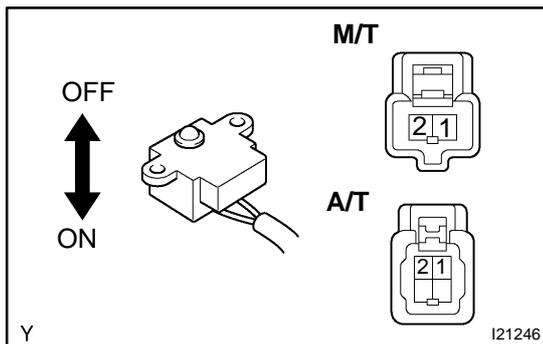

### 2. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Condition	Tester connection	Specified condition
Switch OFF (Key removed)	-	No continuity
Switch ON (Key set)	1-2	Continuity

If continuity is not as specified, replace the switch.