

INSPECTION

1. Left side: INSPECT MIRROR SWITCH INSPECTION


Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	4 - 8, 6 - 7	Continuity
DOWN	4 - 7, 6 - 8	Continuity
LEFT	5 - 8, 6 - 7	Continuity
RIGHT	5 - 7, 6 - 8	Continuity

2. Right side: INSPECTION MIRROR SWITCH INSPECTION


Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	3 - 8, 6 - 7	Continuity
DOWN	3 - 7, 6 - 8	Continuity
LEFT	2 - 8, 6 - 7	Continuity
RIGHT	2 - 7, 6 - 8	Continuity

If continuity is not as specified, replace the switch.


3. INSPECT MIRROR MOTOR OPERATION

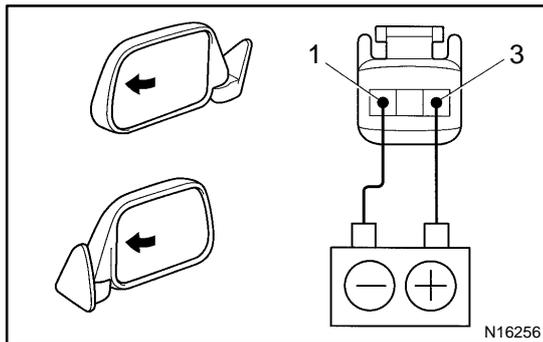


- (a) Connect the positive (+) lead from the battery to terminal 3 and negative (-) lead to terminal 1. Check that the mirror turns to left side.

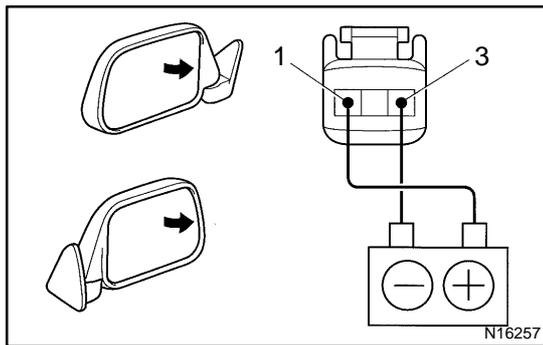

- (b) Reverse the polarity and check that the mirror turns to right side.

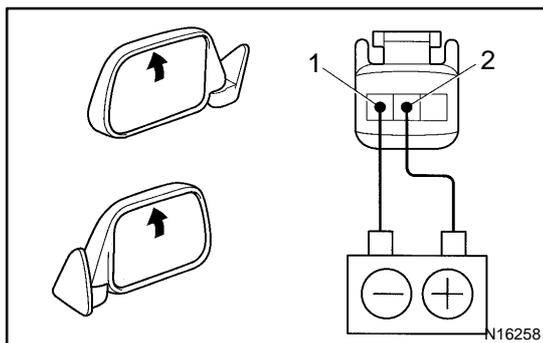

- (c) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1. Check that the mirror turns upward.

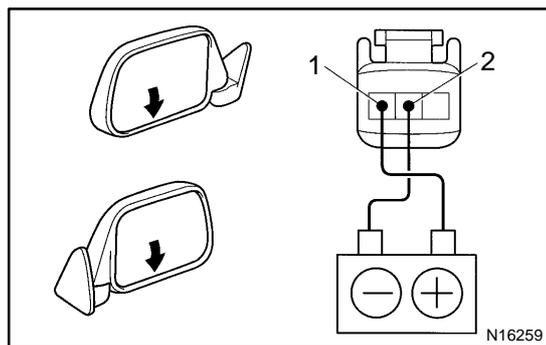

- (d) Reverse the polarity, check that the mirror turns downward.
If operation is not as specified, replace the mirror assembly.