



INSPECTION

INSPECT STOP LIGHT SWITCH CONTINUITY

w/o Cruise control:

Switch position	Tester connection	Specified condition
Switch pin free	1 - 2	Continuity
Switch pin pushed in	1 - 2	No continuity

If continuity is not as specified, replace the switch.

w/ Cruise control:

Switch position	Tester connection	Specified condition
Switch pin free	1 - 2	Continuity
Switch pin pushed in	1 - 2	No continuity
Switch pin free	3 - 4	No continuity
Switch pin pushed in	3 - 4	Continuity

If continuity is not as specified, replace the switch.