


## REMOVAL

### NOTICE:


Tape the screwdriver tip before using, to prevent damaging the body surface.

1. REMOVE ROOF HEAD LINING (See page [BO-60](#), [BO-63](#), [BO-68](#))

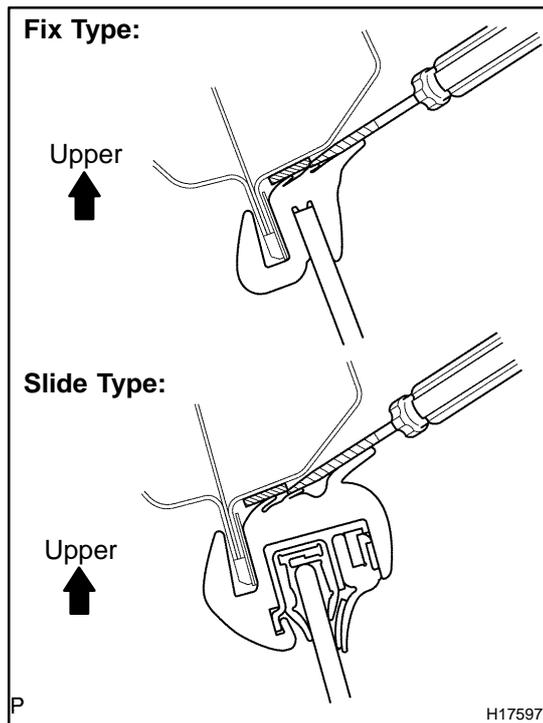

2. REMOVE BACK WINDOW GLASS WITH WINDOW FRAME

- (a) Using a screwdriver, loosen the weatherstrip from the body.

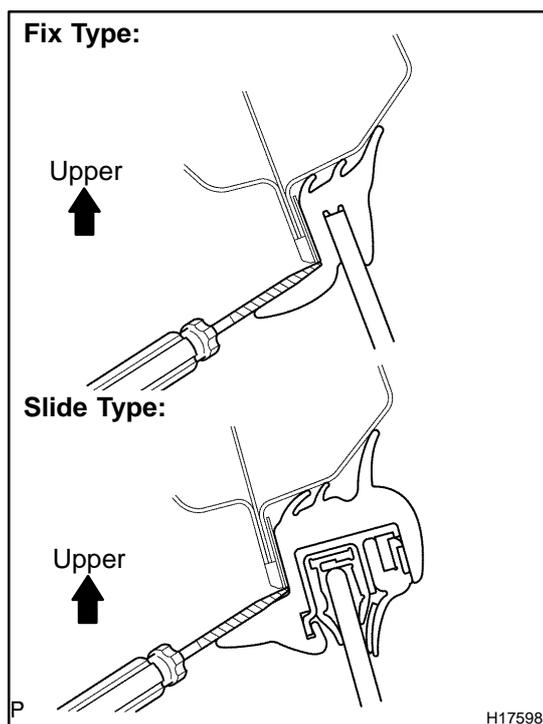

- (b) Pry the lip of the weatherstrip outward from the interior part of the body flange.
- (c) Pull the glass outwards, and remove it with the weatherstrip.