

## DISASSEMBLY

### 1. REMOVE OUTER SHIELDS

Remove the 2 screws and outer shields.

### 2. REMOVE SEATBACK ASSEMBLY

Remove the 2 bolts and seatback assembly.

### 3. REMOVE SEATBACK COVER

(a) Remove the hog rings and seatback frame from the seatback cover with pad.

(b) Remove the hog rings and seatback cover from the seatback pad.

### 4. REMOVE OUTER TRACKS

(a) Remove the 4 bolts and outer tracks.

(b) Remove the cable from the outer tracks.

### 5. REMOVE SEAT CUSHION COVER

(a) Remove the hog rings and seat cushion frame from the seat cushion cover with pad.

(b) Remove the hog rings and cushion cover from the seat cushion pad.