

INSPECTION

INSPECT SLIDING LOCK POSITION SLIPPING OFF

When sliding the seat, inspect that the outer and inner tracks are locked at the same time.

HINT:

When sliding lock positions slip off, loosen the bolts to adjust the position.