

REASSEMBLY

1. INSTALL SEAT CUSHION COVER

- (a) Install the seat cushion cover with new hog rings to the seat cushion pad.

HINT:

When installing the hog rings, take care to prevent wrinkles as little as possible.

- (b) Install the seat cushion cover with pad and new hog rings to the seat cushion frame.

HINT:

When installing the hog rings, take care to prevent wrinkles as little as possible.

2. INSTALL OUTER TRACKS

- (a) Slide the outer tracks to the frontmost position.
(b) Install the cable to the outer tracks.
(c) Install the outer tracks with the 4 bolts to the seat cushion assembly.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

3. INSTALL SEATBACK COVER

- (a) Install the seatback cover with new hog rings to the seatback pad.

HINT:

When installing the hog rings, take care to prevent wrinkles as little as possible.

- (b) Install the seatback frame with new hog rings to the seatback cover with pad.

HINT:

When installing the hog rings, take care to prevent wrinkles as little as possible.

4. INSTALL SEATBACK ASSEMBLY

Install the seatback assembly with the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

5. INSTALL OUTER SHIELDS

Install the outer shields with the 2 screws.