

DISASSEMBLY

1. REMOVE HEADREST

2. REMOVE ARMREST ASSEMBLY

- (a) Remove the screw and RH seat cushion cover.
- (b) Remove the 4 bolts and armrest assembly.

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE

4. REMOVE OUTER SHIELD

Remove the screw and outer shield.

5. REMOVE INNER SHIELD

Remove the screw and inner shield.

6. REMOVE SEATBACK ASSEMBLY

- (a) Remove the hog rings.
- (b) Remove the 4 bolts and seatback assembly.

7. REMOVE SEATBACK COVER

- (a) Remove the headrest supports.
- (b) Remove the seatback frame from the seatback cover with pad.
- (c) Remove the hog rings and seatback cover from the seatback pad.

8. REMOVE SEAT CUSHION ASSEMBLY

Remove the 4 bolts and seat cushion assembly.

9. REMOVE SEAT CUSHION COVER

- (a) Remove the hog rings and seat cushion frame from the seat cushion cover with pad.
- (b) Remove the hog rings and seat cushion cover from the seat cushion pad.

10. REMOVE RECLINING CONNECTING PIPE

Remove the reclining connecting pipe from the seat tracks.

11. REMOVE INSIDE INNER SHIELD

Remove the screw and inside inner shield.

12. REMOVE INSIDE OUTER SHIELD

Remove the screw and inside outer shield.

13. REMOVE CABLE

14. REMOVE SEAT ADJUSTER

Remove the 2 bolts and seat adjuster.

15. REMOVE FRONT SEAT INNER BELT

Unfasten the bolt and remove the front seat inner belt.