

DISASSEMBLY

1. REMOVE FRONT SEAT

- (a) Using a screwdriver, remove the 2 seat track covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 bolts and front seat.

NOTICE:

Be careful not to damage the body.

2. REMOVE HEADREST

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE

4. REMOVE SEAT ADJUSTER KNOB

5. REMOVE OUTER SHIELD

Remove the screw and outer shield.

6. REMOVE INNER SHIELD

Remove the screw and inner shield.

7. REMOVE SEAT CUSHION ASSEMBLY

Remove the 4 bolts and seat cushion assembly.

8. REMOVE SEAT CUSHION COVER

- (a) Remove the seat cushion frame from the seat cushion cover with pad.

- (b) Remove the hog rings and seat cushion cover from the seat cushion pad.

9. REMOVE SEATBACK ASSEMBLY

- (a) Remove the hog rings.

- (b) Disconnect the connector.

- (c) Remove the 4 bolts and seatback assembly.

10. REMOVE SEATBACK COVER

- (a) Remove the headrest supports.

- (b) Driver's seat:

Disconnect the connector and remove the lumber support switch.

- (c) Remove the seatback frame from the seatback cover with pad.

- (d) Driver's seat:

Remove the 2 screws, lumber support.

- (e) Remove the hog rings and seatback cover from the seatback pad.

11. REMOVE RECLINING CONNECTING PIPE

Remove the reclining connecting pipe from the seat tracks.

12. REMOVE INSIDE INNER SHIELD

Remove the screw and inside inner shield.

13. REMOVE INSIDE OUTER SHIELD

Remove the screw and inside outer shield.

14. REMOVE EQUALIZING WIRE

15. REMOVE FRONT SEAT INNER BELT

Remove the nut and front seat inner belt.