


INSTALLATION

1. INSTALL WINDOW WASHER NOZZLES

- (a) Connect the washer hose.
- (b) Install the washer nozzles to the hood.

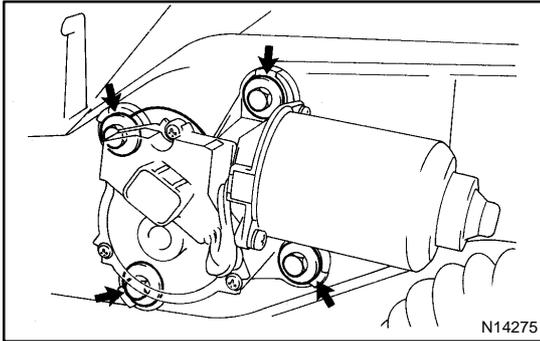

2. INSTALL WIPER MOTOR

Install the wiper motor and fasten the 4 bolts, then connect the connector.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

3. INSTALL WIPER LINK

- (a) Connect the wiper link to the wiper motor.
- (b) Install the 6 bolts.


Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

4. INSTALL COWL LOUVER

Install the cowl louver with the 6 screws and 4 clips.

5. INSTALL WIPER ARMS

- (a) Operate the wipers once and turn the wiper switch OFF.
- (b) Install the wiper arms and tighten nuts by hand.

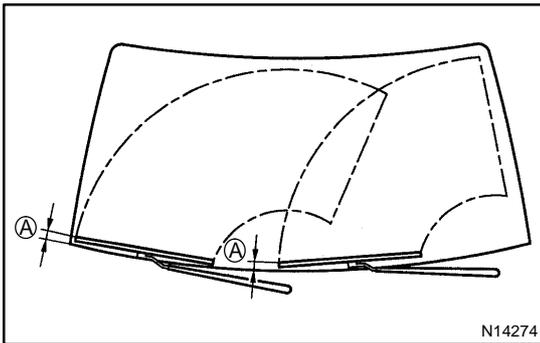

- (c) Adjust the installation position of the wiper arms to the positions as shown in the illustration.

A: 25.0 mm (0.984 in.)

- (d) Torque the nuts.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)