

## REMOVAL

### 1. REMOVE WIPER ARMS

- (a) Using a screwdriver, remove the caps.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the 2 nuts and wiper arms.

### 2. REMOVE COWL LOUVER

Remove the 6 screws, 4 clips and cowl louver.

### 3. REMOVE WIPER LINK

- (a) Remove the 6 bolts.  
 (b) Disconnect the wiper link from the wiper motor.  
 (c) Remove the wiper link through the service hole.

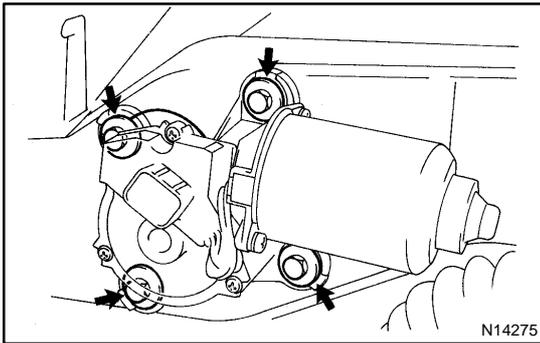

### 4. REMOVE WIPER MOTOR

Disconnect the connector, then unfasten the 4 bolts and remove the motor.

### 5. REMOVE WINDOW WASHER NOZZLES

- (a) Using a screwdriver, remove the window washer nozzles from the hood.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the washer hoses.