


## REMOVAL

### 1. REMOVE CLEARANCE LIGHTS

Remove the screw and clearance light forward, disconnect the connector.

#### NOTICE:

**Be careful not to break the clearance light when removing it forward.**

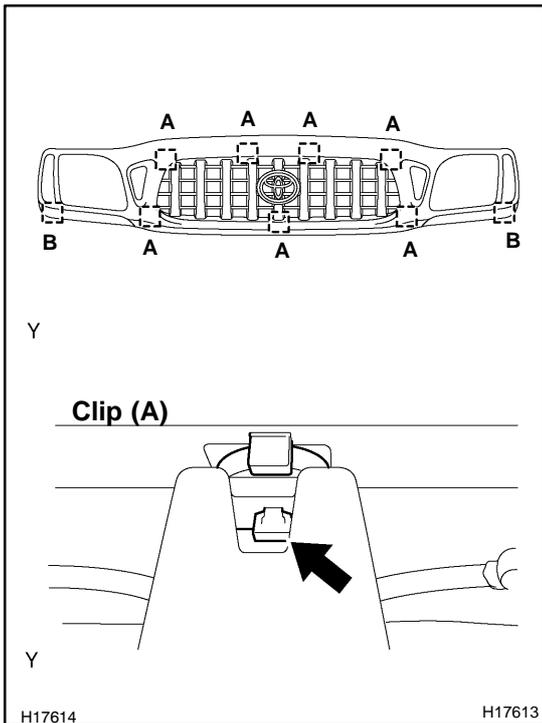

### 2. REMOVE RADIATOR GRILLE

(a) Using a screwdriver, push the 7 clips (A) downward as shown in the illustration.

(b) Using long nose pliers, disconnect the 2 clips (B)

(c) Remove the radiator grille and 9 clips

### 3. REMOVE HEADLIGHTS

Disconnect the connector, remove the bolt, 2 nuts and headlight.