


## HOOD ADJUSTMENT

B006Z-03

### HINT:

Since the centering bolt is used as the hood hinge set bolt, the hood cannot be adjusted with it on. Substitute the bolt with the washer for the centering bolt.

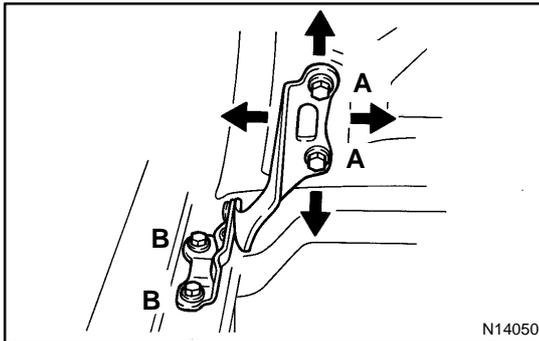


### 1. ADJUST HOOD IN FORWARD/ REARWARD AND LEFT/ RIGHT DIRECTIONS

Adjust the hood by loosening the hood side hinge bolts.

#### Torque:


**13 N·m (130 kgf·cm, 10 ft·lbf) for A**

**18 N·m (180 kgf·cm, 13 ft·lbf) for B**

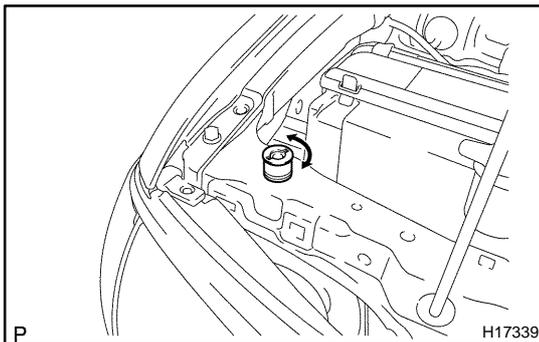

### 2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the cushions.

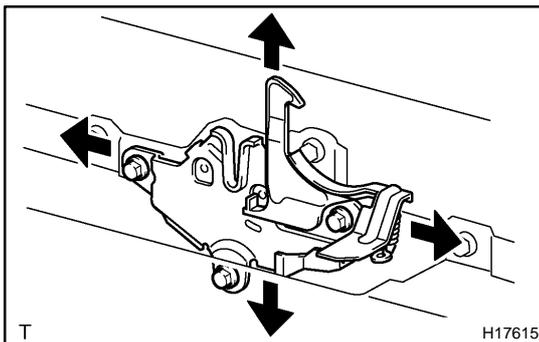

### 3. ADJUST HOOD LOCK

Adjust the lock by loosening the 3 bolts.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**