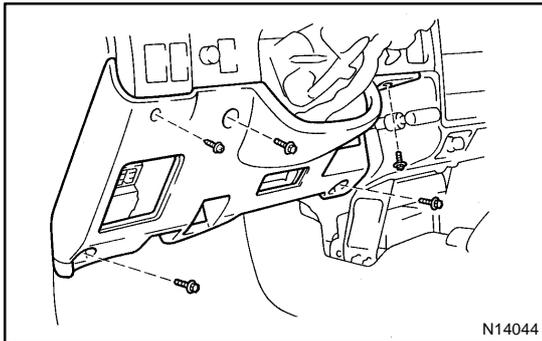


REMOVAL

HINT:

Tape the screwdriver tip before to pry parts.

1. **REMOVE STEERING WHEEL (See page SR-14)**
2. **REMOVE COMBINATION SWITCH**
 - (a) Remove the 3 screws and steering column covers.
 - (b) Disconnect the 4 connectors and remove 3 screws and combination switch.



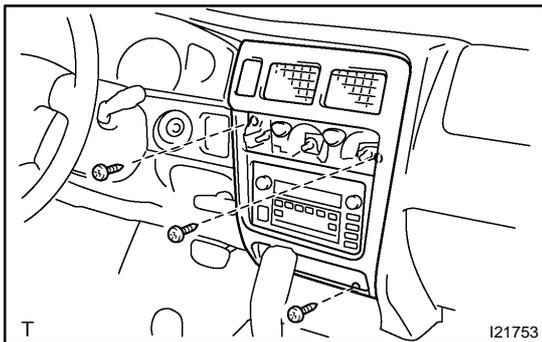
3. **REMOVE LOWER LH FINISH PANEL**
 - (a) Remove the 2 screws and hood lock release lever.
 - (b) Remove the 4 bolts, screw and lower LH finish panel.

4. REMOVE LOWER CENTER COVER

Remove the 2 clips and lower center cover.

5. REMOVE CENTER CLUSTER FINISH PANEL

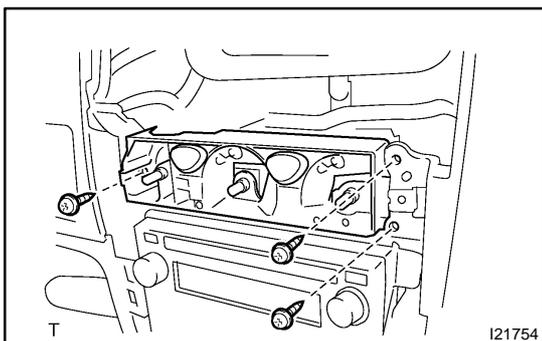
- (a) Remove the 3 heater control knobs.
- (b) Using a screwdriver, pry and remove the heater control panel.



- (c) Remove the 3 screws.
- (d) Using a screwdriver, remove the center cluster finish panel.
- (e) Disconnect the connector and ash receptacle box light.
- (f) Remove the cigar lighter hole bezel from the center cluster finish panel.
- (g) Remove the front ash receptacle box and retainer from the center cluster finish panel.

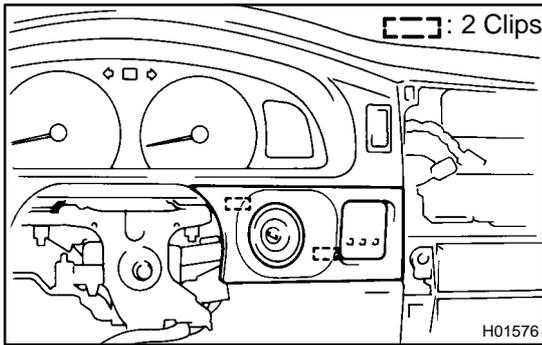
6. REMOVE RADIO AND STEREO

Remove the 4 bolt and radio and stereo, disconnect the connectors.



7. REMOVE HEATER CONTROL UNIT

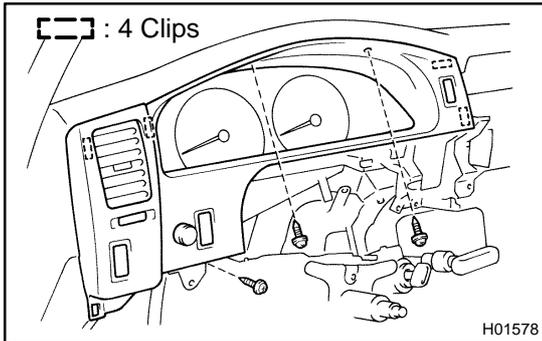
Remove the 3 screws and heater control unit and disconnect the 2 connectors.

**8. REMOVE STARTER SWITCH BEZEL**

Using a screwdriver, remove the starter switch bezel and disconnect the connector.

9. REMOVE LOWER CENTER FINISH PANEL

Remove the screw and panel.

**10. REMOVE CLUSTER FINISH PANEL**

- (a) Remove the screw and No. 2 heater to register duct.
- (b) Remove the 3 screws.
- (c) Using a screwdriver, remove the cluster finish panel and disconnect the connectors.

11. REMOVE COMBINATION METER

Remove the 4 screws and meter and disconnect the connectors.

12. REMOVE NO. 1 HEATER TO REGISTER DUCT

Remove the screw and No. 1 heater to register duct.

13. REMOVE GLOVE COMPARTMENT DOOR

Remove the 2 screws and glove compartment door.

14. REMOVE GLOVE COMPARTMENT DOOR REINFORCEMENT

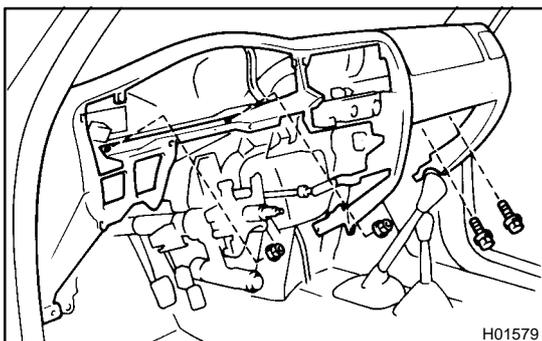
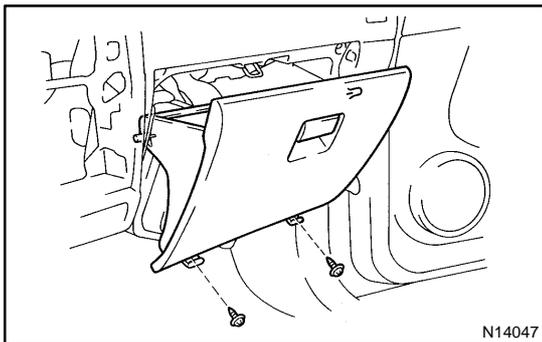
Remove the bolt 2 screws and glove compartment door reinforcement.

15. REMOVE NO. 4 HEATER TO REGISTER DUCT**16. DISCONNECT FRONT AIRBAG CONNECTOR**

(See page [RS-25](#))

17. REMOVE LOWER NO. 2 FINISH PANEL

Remove the 3 bolts and lower No. 2 finish panel and disconnect the wire harnesses.

18. REMOVE STEERING COLUMN (See page [SR-14](#))**19. REMOVE INSTRUMENT PANEL**

Remove the 2 bolts, 2 nuts and instrument panel with the passenger air bag.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

20. REMOVE NO. 1 BRACE

- (a) Remove the 2 screw and disconnect the connector.
- (b) Remove the 3 bolts and No. 1 brace and disconnect the wire harness.

21. REMOVE NO. 2 BRACE

Disconnect the wire harness and remove the 2 bolts and No. 2 brace.

22. REMOVE CENTER HEATER TO REGISTER DUCT

Remove the screw and center heater to register duct.

23. REMOVE NO. 1 HEATER TO REGISTER DUCT

Remove the screw and No. 1 heater to register duct.

24. REMOVE DEFROSTER NOZZLE

25. DISCONNECT PARKING BRAKE LEVER

Remove the 2 bolts and disconnect the parking brake lever.

26. REMOVE REINFORCEMENT

(a) Disconnect the wire harnesses.

(b) Remove the 3 bolts, 4 nuts, 2 screws and reinforcement.

27. REMOVE CENTER BRACKET

Remove the screw and center bracket.

28. REMOVE NO. 5 HEATER TO REGISTER DUCT

Remove the screw and No. 5 heater to register duct.

29. REMOVE NO. 2 REGISTER

Remove the 3 screws and No. 2 register.

30. REMOVE NO. 1 REGISTER

Remove the 2 screws and No. 1 register.

31. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

(a) Remove the 2 bolts and front passenger airbag assembly.

Torque: 5.0 N·m (51 kgf·cm, 42 in.-lbf)

(b) Remove the 3 bolts and front passenger airbag door.

(c) Remove the 2 screws and instrument panel stay.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag side deployment direction facing down.
- Never disassemble the front passenger airbag assembly.

