


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

- (a) Remove the front seat outer belt (See page [BO-103](#)).
- (b) Loosen the body side hinge nuts, bring and push the door to adjust.

Torque: 20 N·m (200 kgf·cm, 15 ft·lbf)

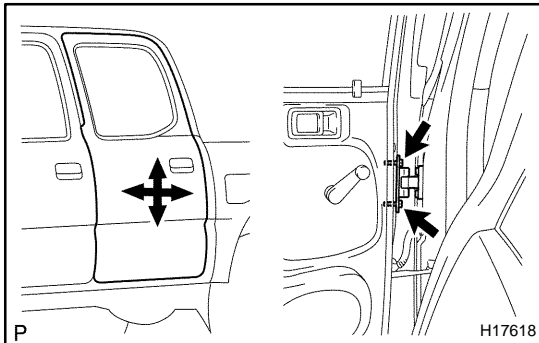


2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts, bring or push the door to adjust.

HINT:

Substitute the standard bolt for the centering bolts (See page [BO-11](#)).

Torque: 23 N·m (230 kgf·cm, 17 ft·lbf)

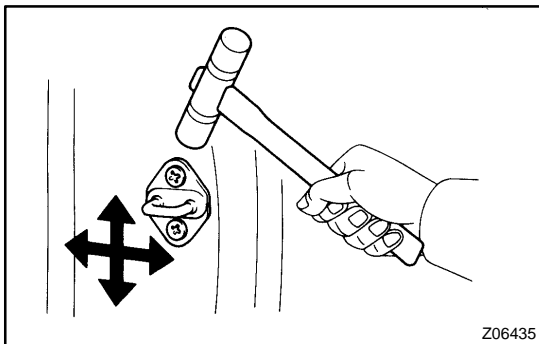

3. ADJUST DOOR LOCK STRIKER

- (a) Check that the door fit and door lock linkages are adjusted correctly.
- (b) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.
- (c) Tighten the striker mounting screws again.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)